 
 



{ } : NAME INDICATED ON FUSE BOX COVER



 
0140-01A  
PCM

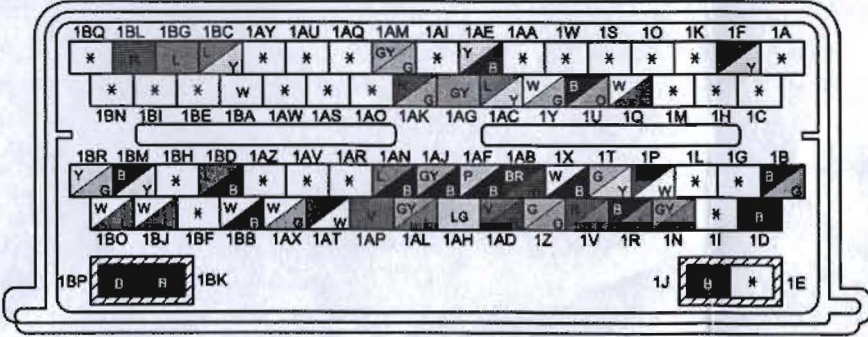


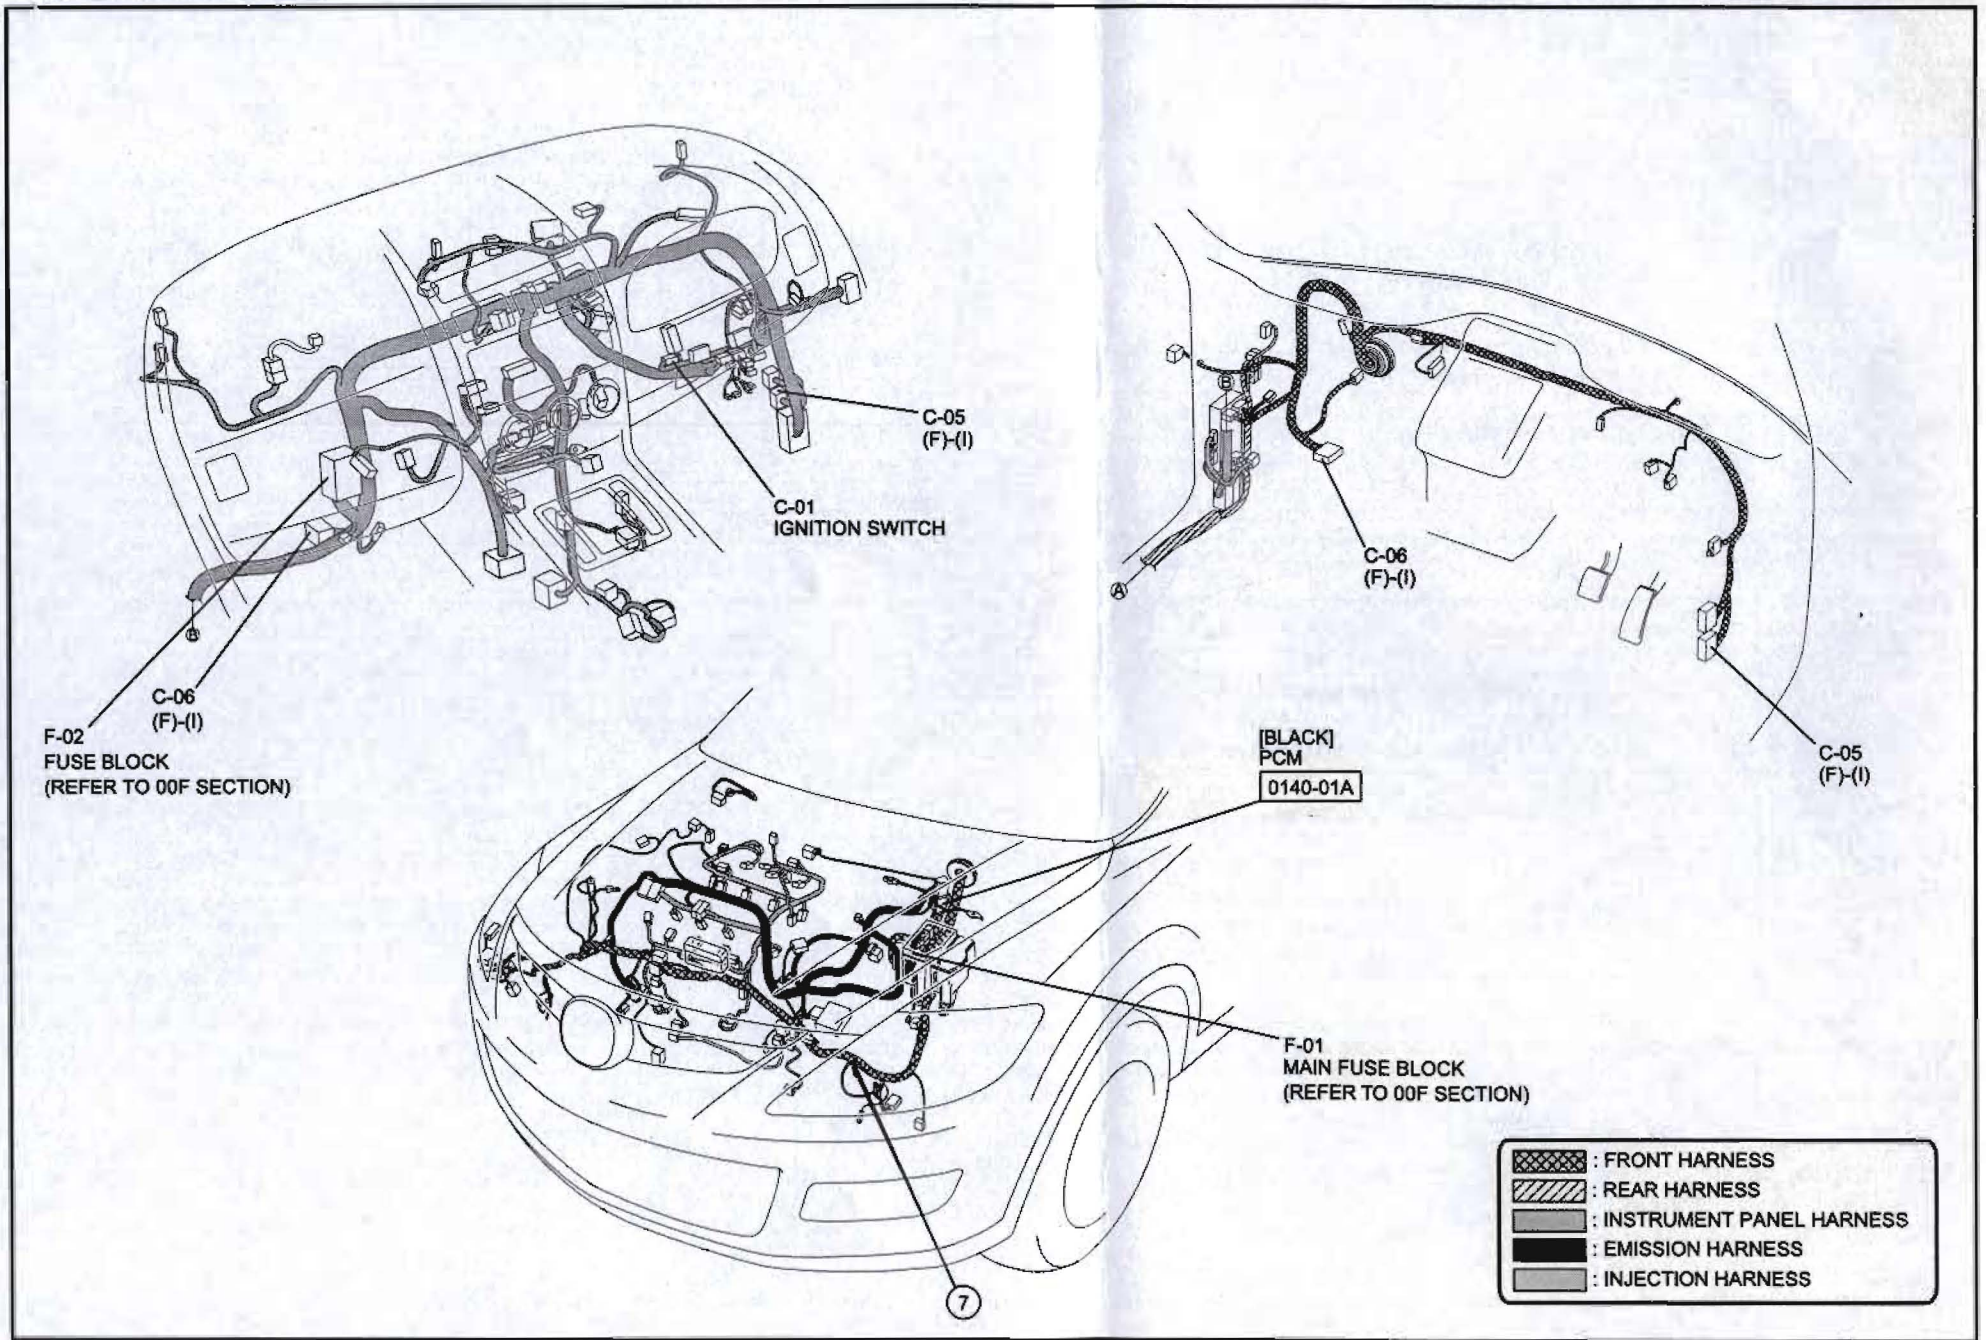


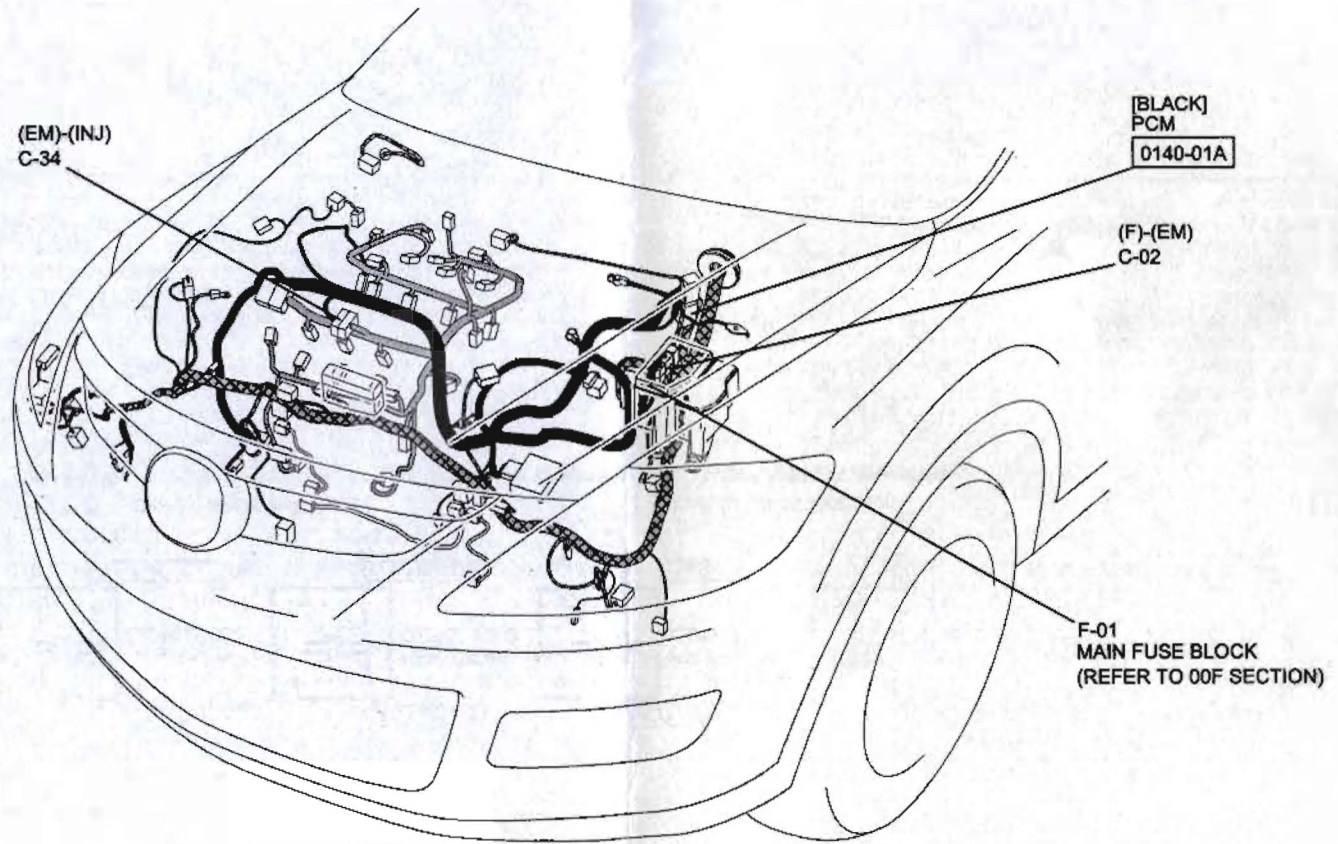


	: FRONT HARNESS
	: EMISSION HARNESS
	: INJECTION HARNESS

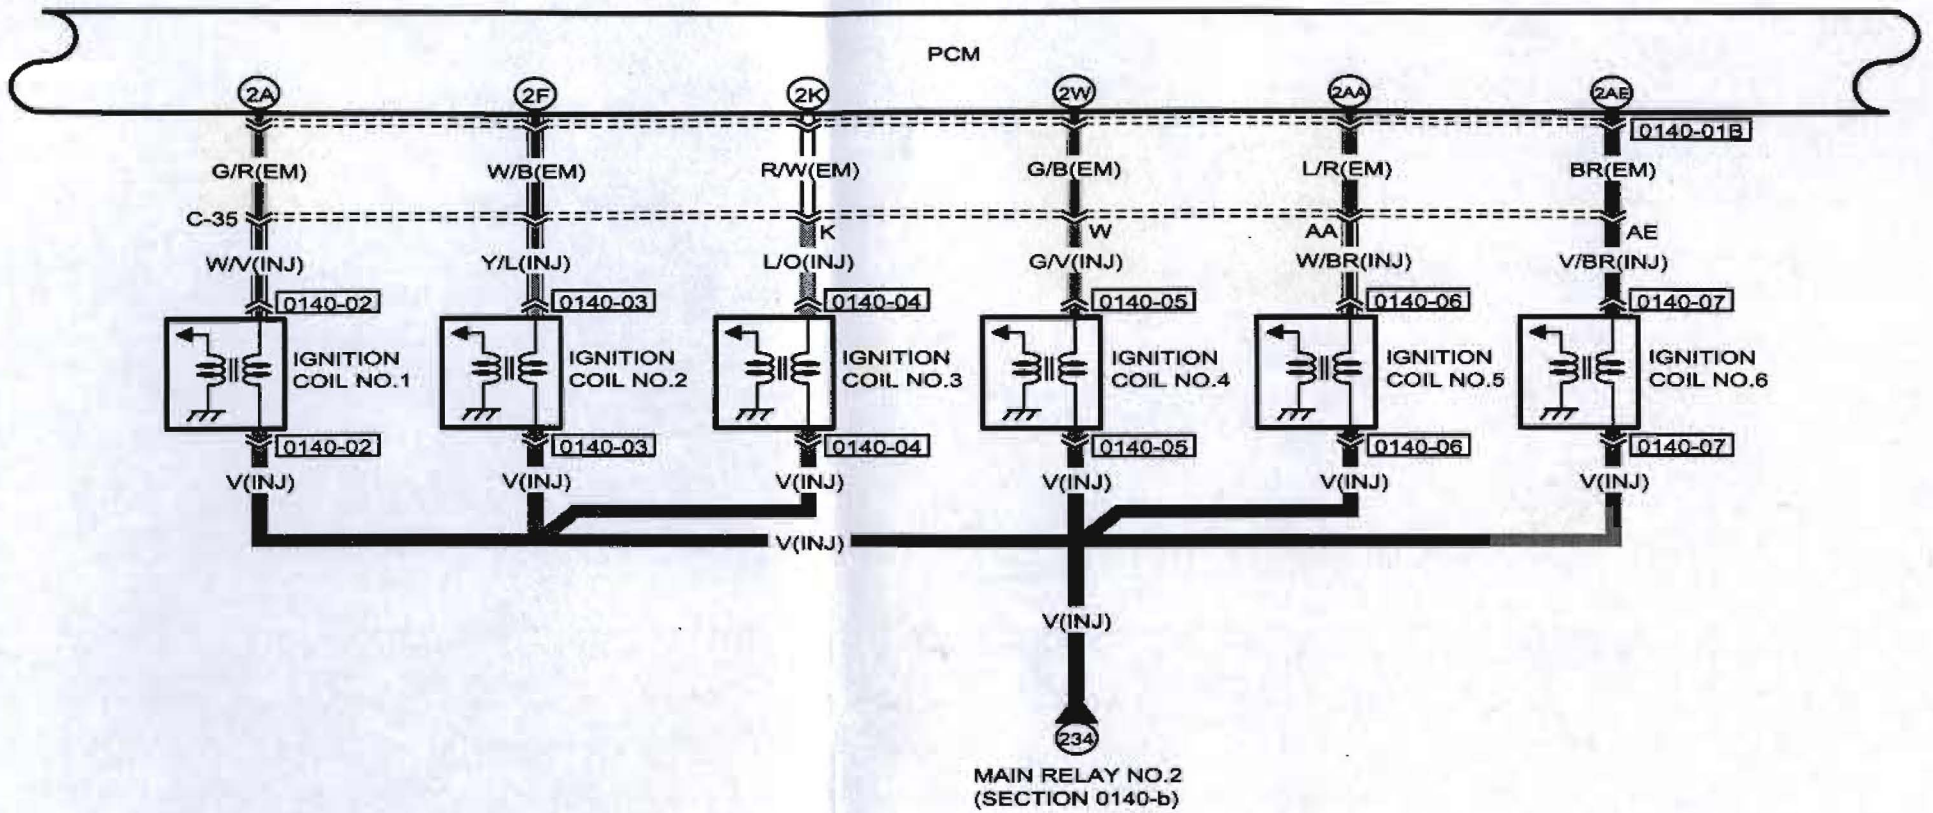 

0140-01B  
PCM

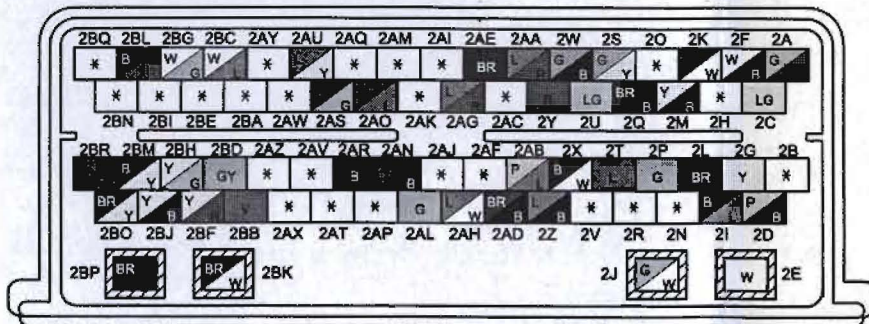 


0140-02  
IGNITION COIL NO.1

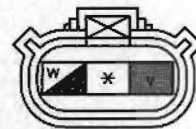 


0140-03  
IGNITION COIL NO.2



 0140-04  
IGNITION COIL NO.3

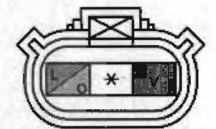


0140-05  
IGNITION COIL NO.4

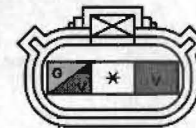 


0140-06  
IGNITION COIL NO.5




   0140-07  
IGNITION COIL NO.6

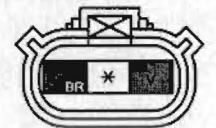 


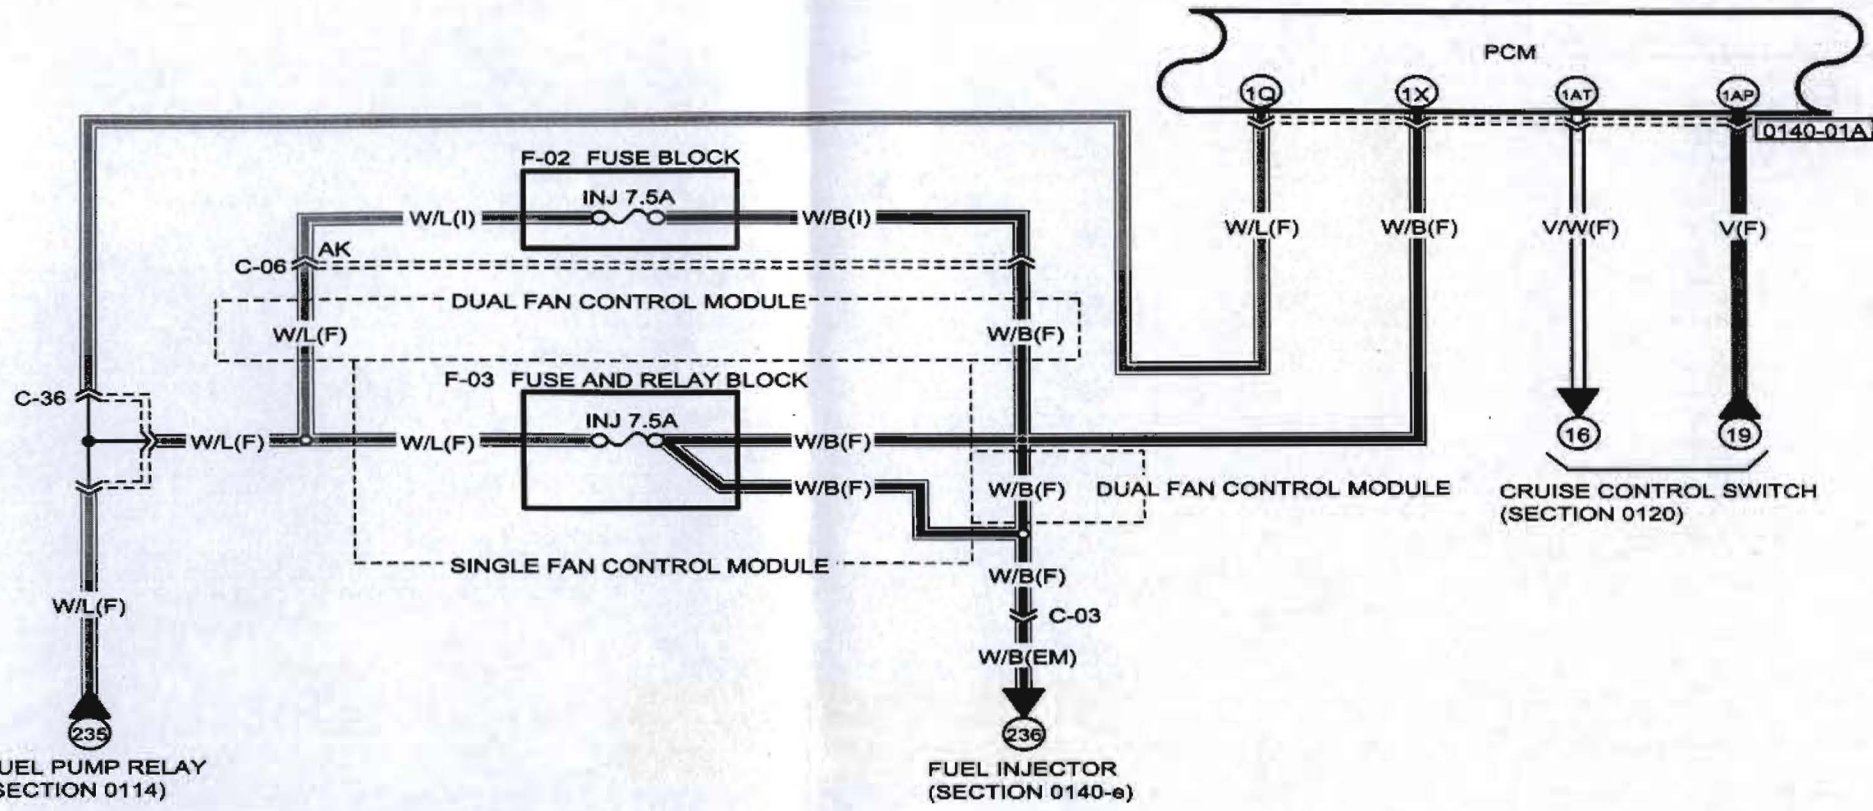
 

 



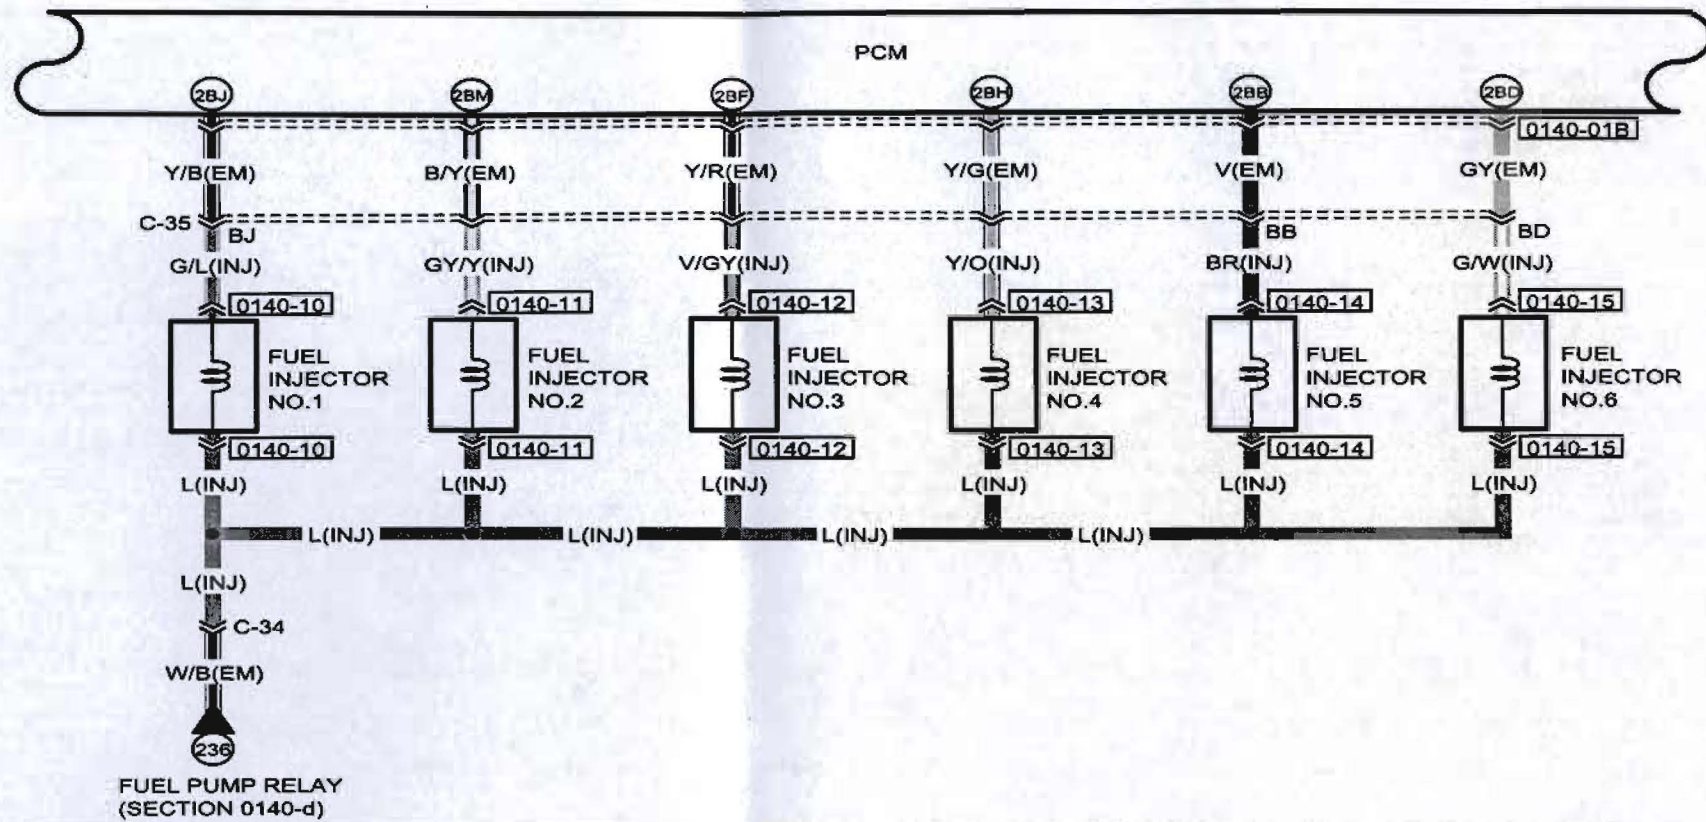 
0140-01A  
PCM

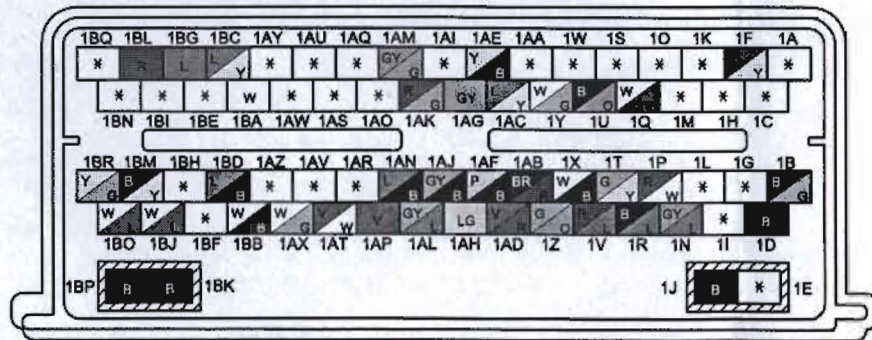


71

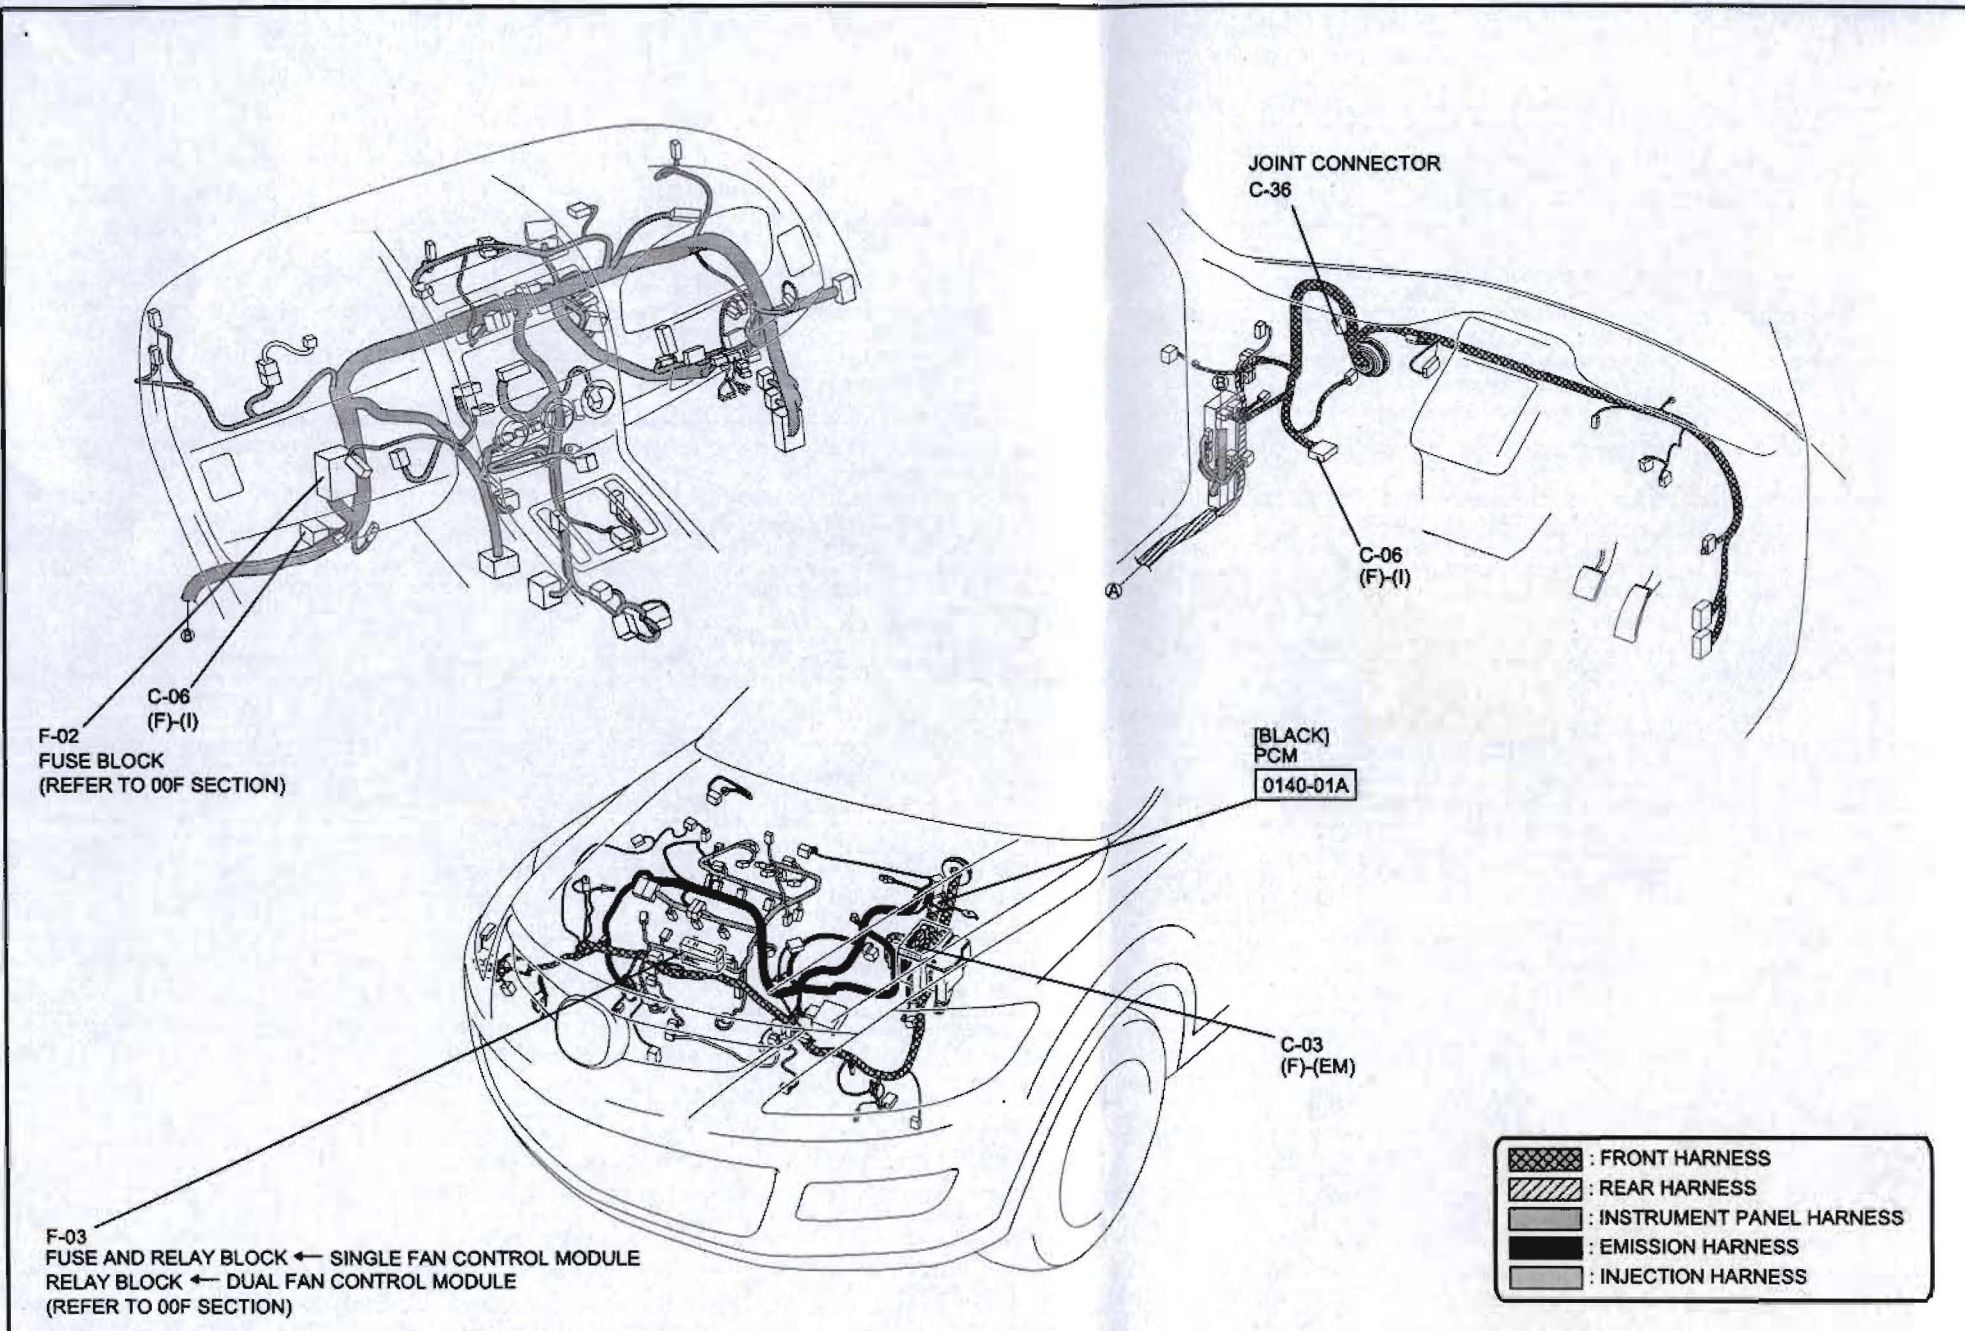

	: FRONT HARNESS
	: REAR HARNESS
	: INSTRUMENT PANEL HARNESS
	: EMISSION HARNESS
	: INJECTION HARNESS



 0140-01B  
PCM

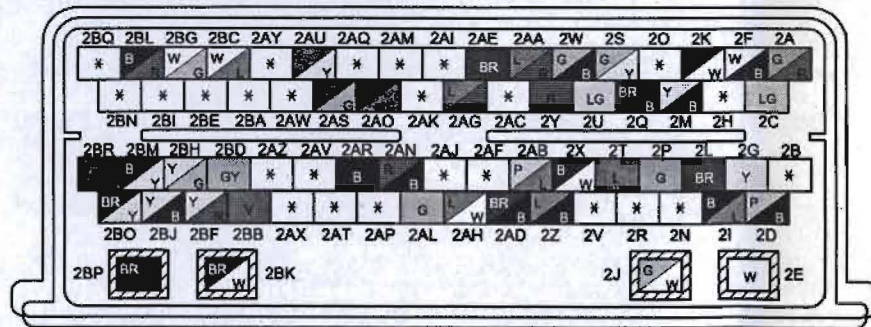

0140-10  
FUEL INJECTOR NO.1



0140-11  
FUEL INJECTOR NO.2



0140-12  
FUEL INJECTOR NO.3



0140-13  
FUEL INJECTOR NO.4



 
0140-14  
FUEL INJECTOR NO.5


 



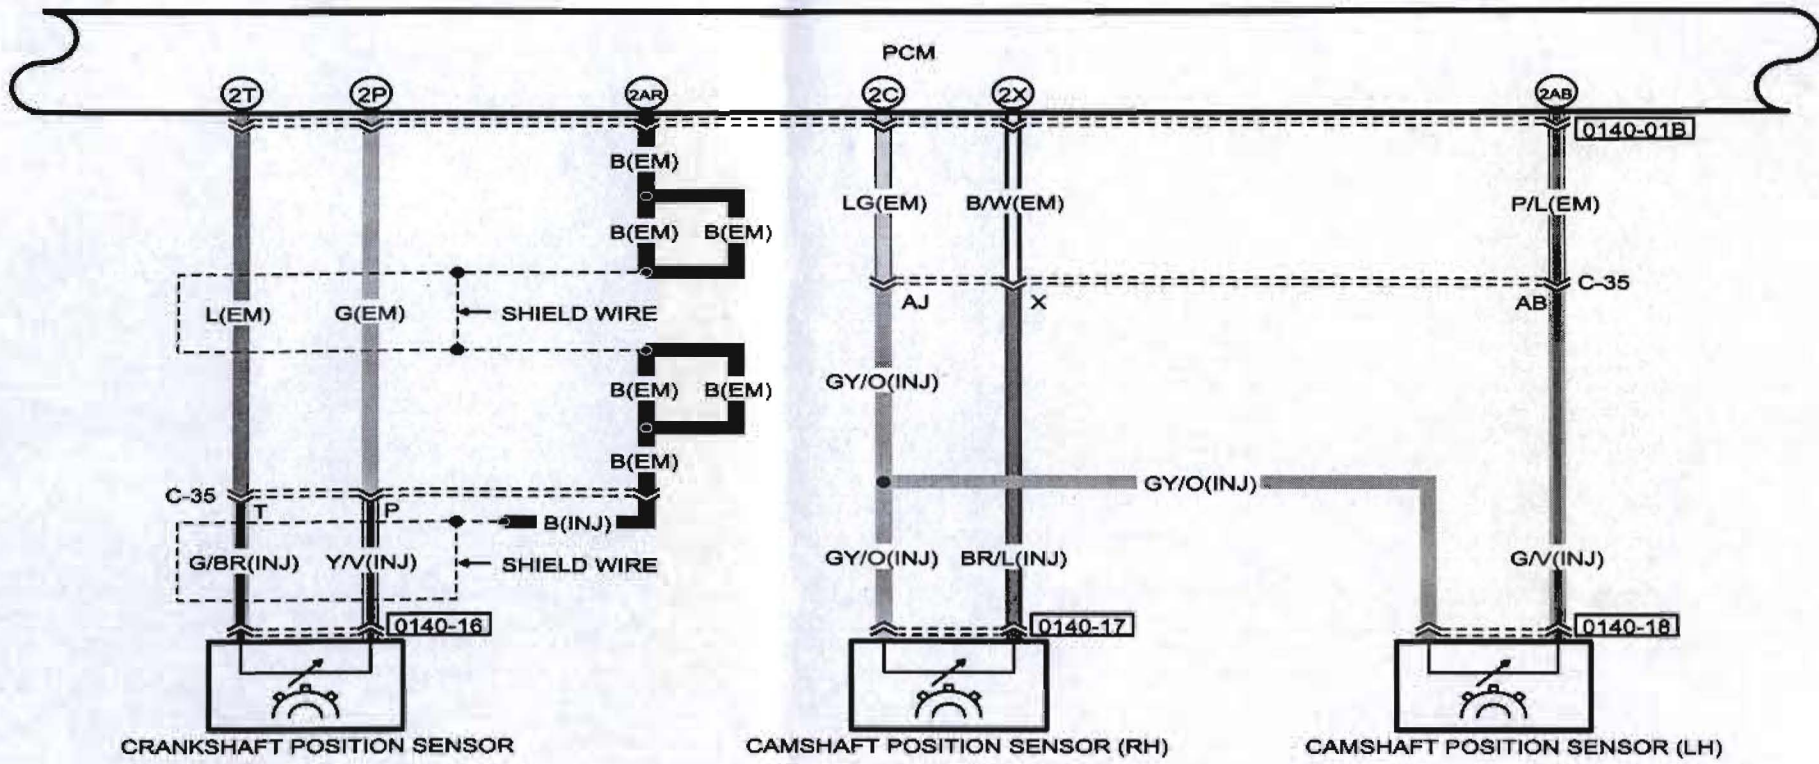 
0140-15  
FUEL INJECTOR NO.6






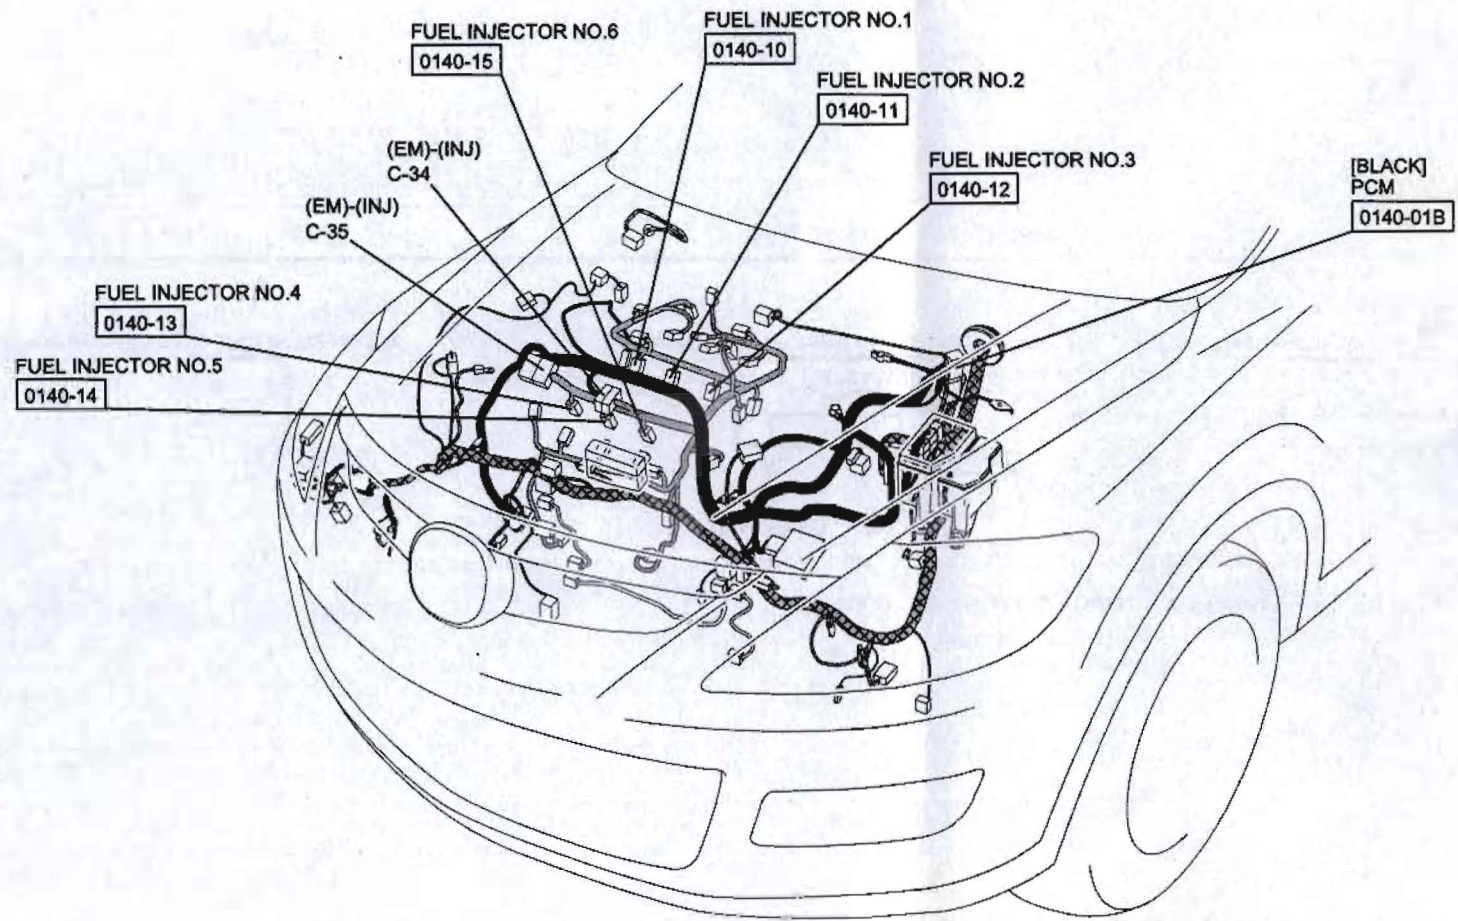

	: FRONT HARNESS
	: EMISSION HARNESS
	: INJECTION HARNESS



 0140-01B  
PCM

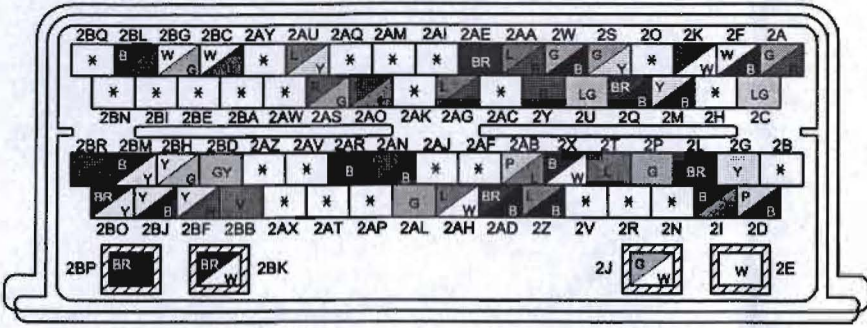

0140-16  
CRANKSHAFT POSITION  
SENSOR



0140-17  
CAMSHAFT POSITION  
SENSOR (RH)



 
0140-18  
CAMSHAFT POSITION  
SENSOR (LH)






CONTROL SYSTEM

0140-e

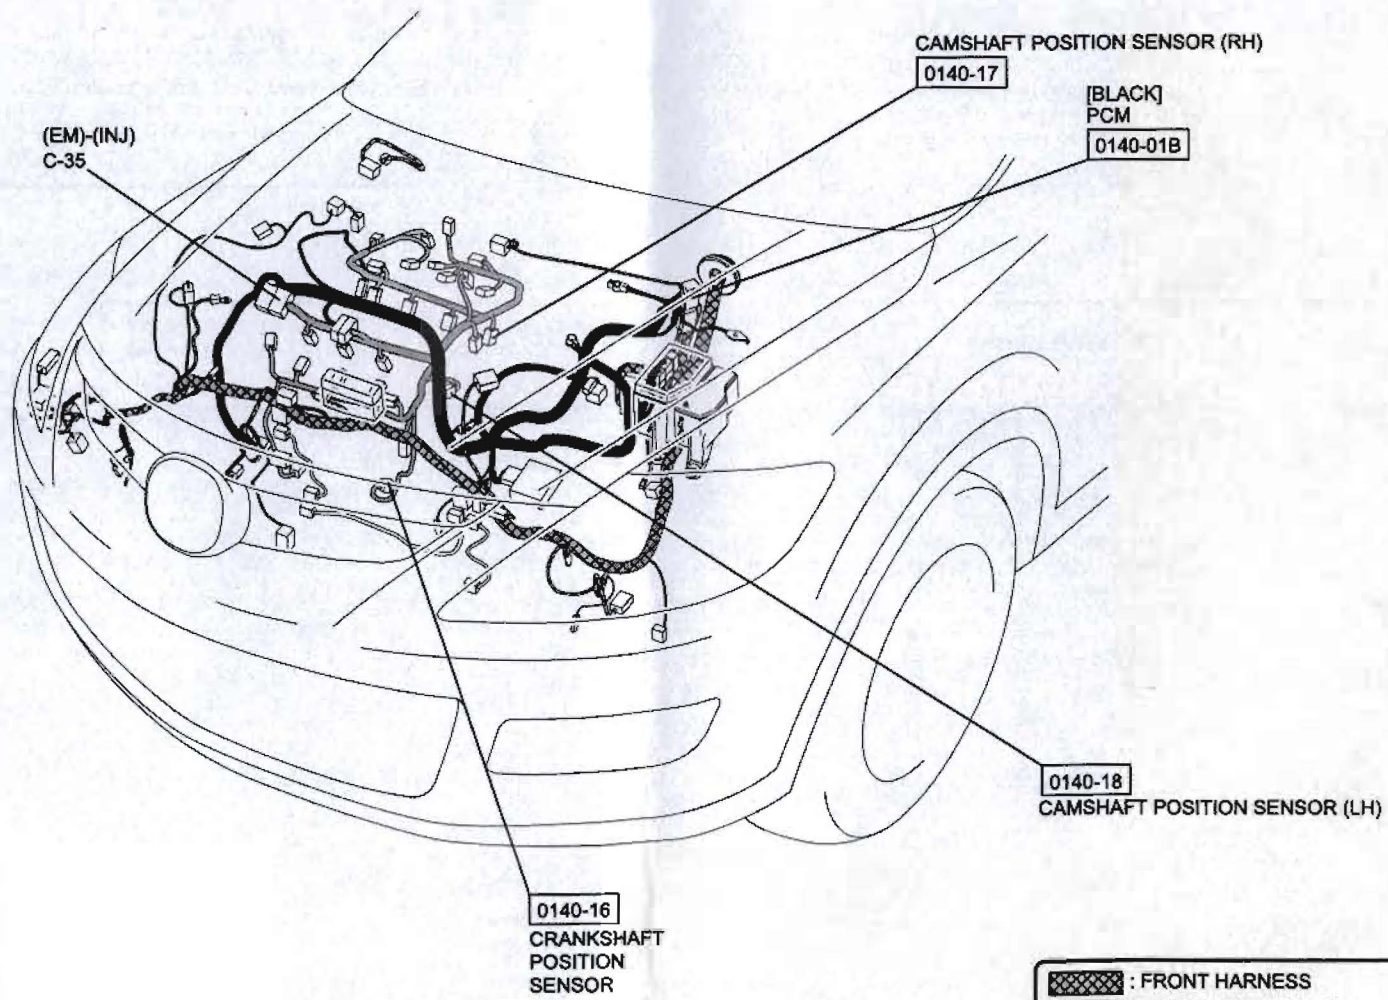
0140-f




	: FRONT HARNESS
	: EMISSION HARNESS
	: INJECTION HARNESS

 75




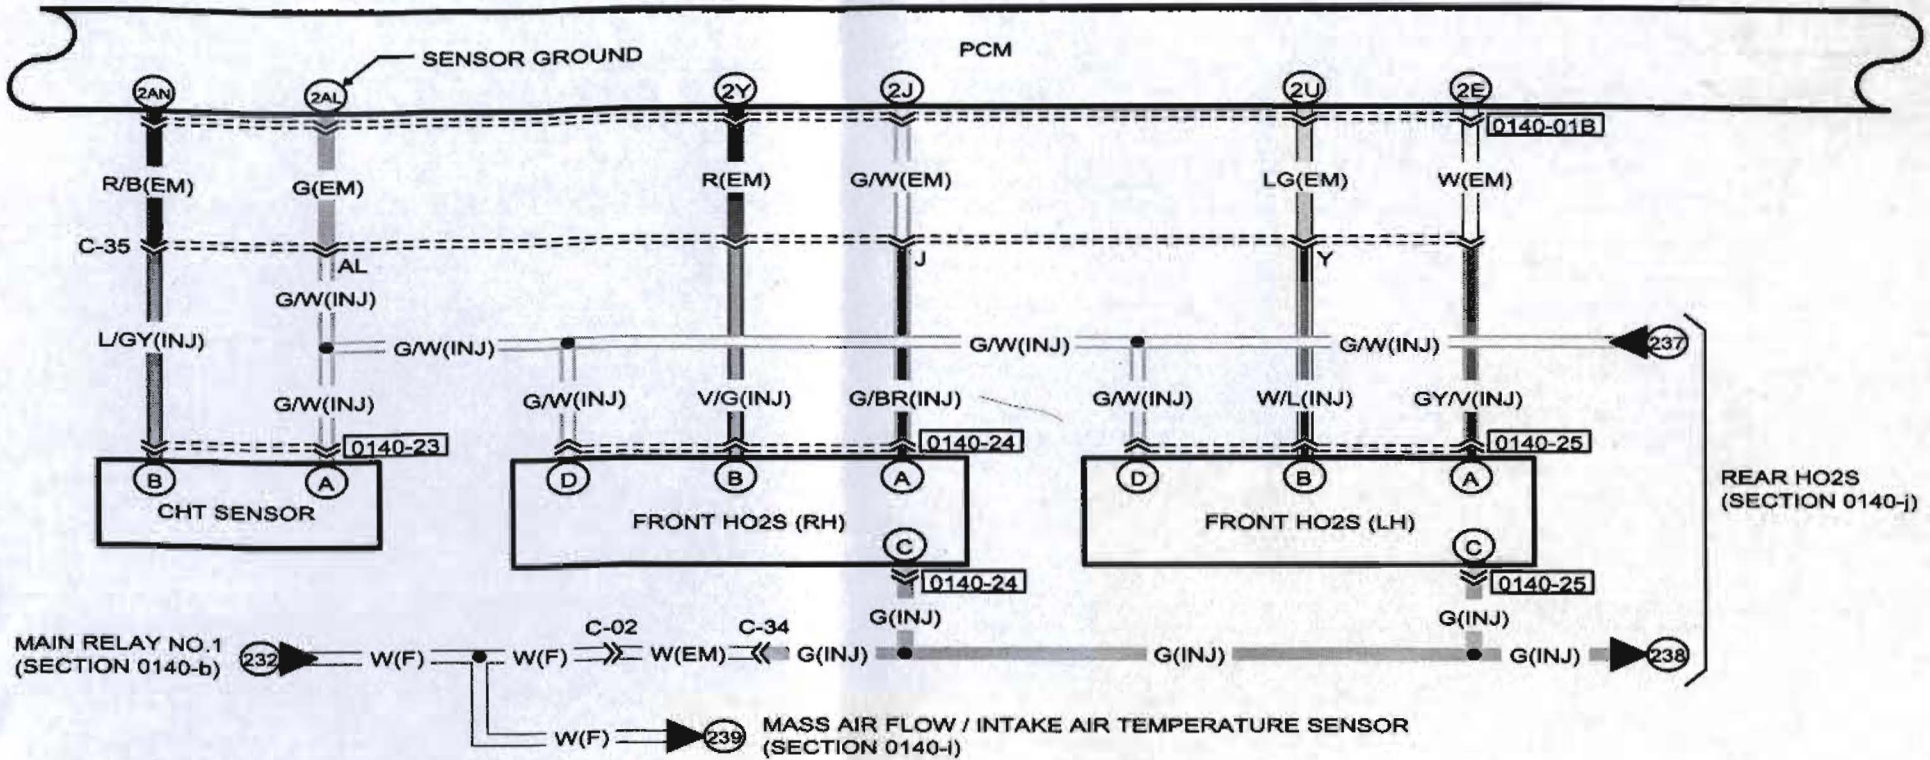


0140-01B  
PCM

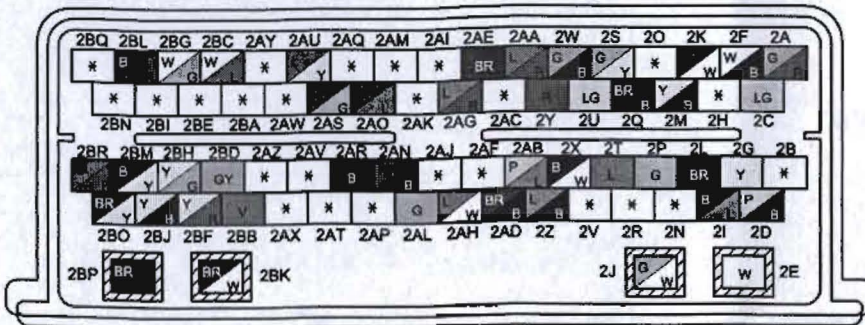 


0140-23  
CHT SENSOR


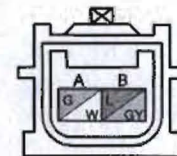 



0140-24  
FRONT HO2S (RH)

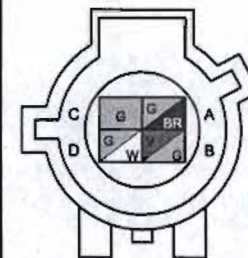 


0140-25  
FRONT HO2S (LH)

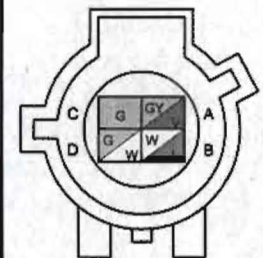 

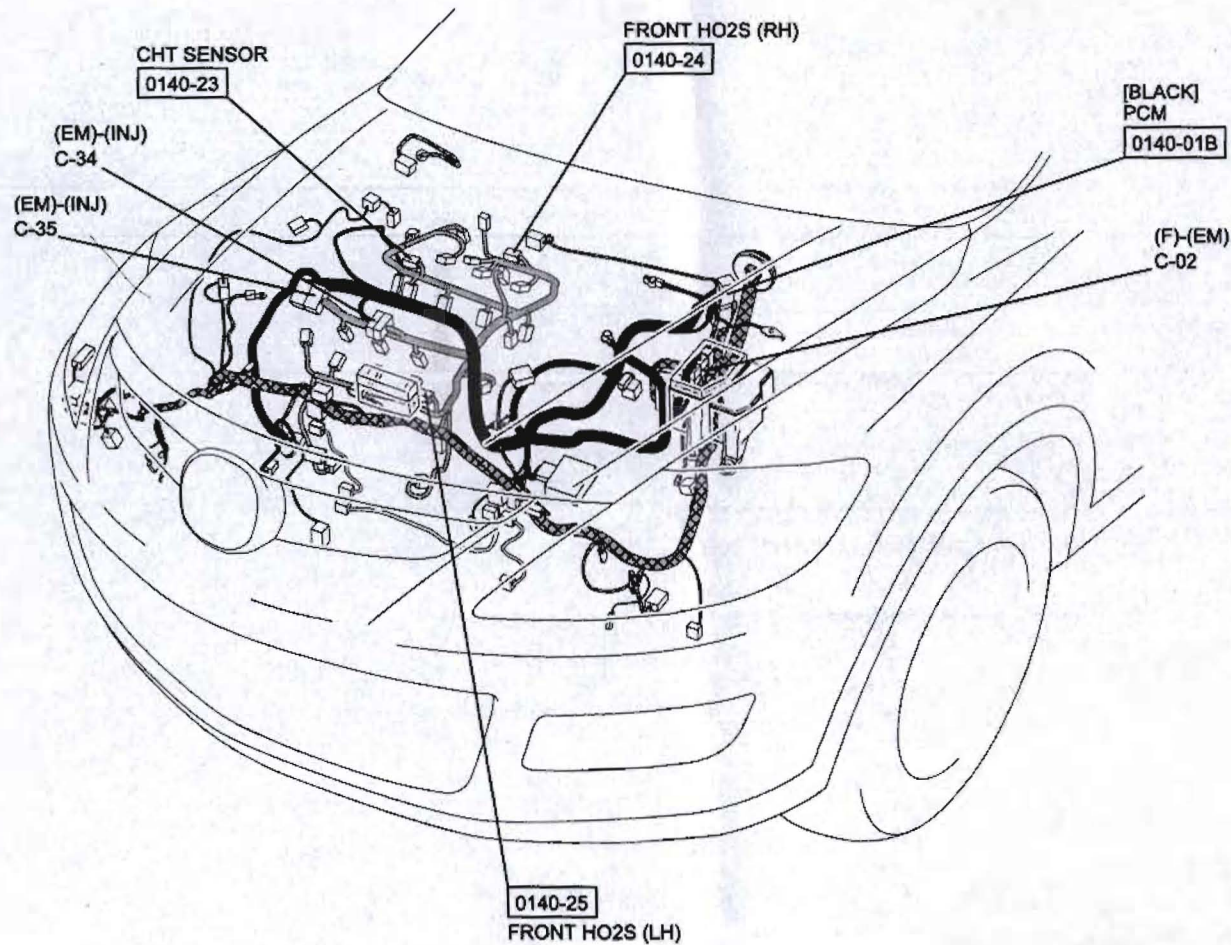  


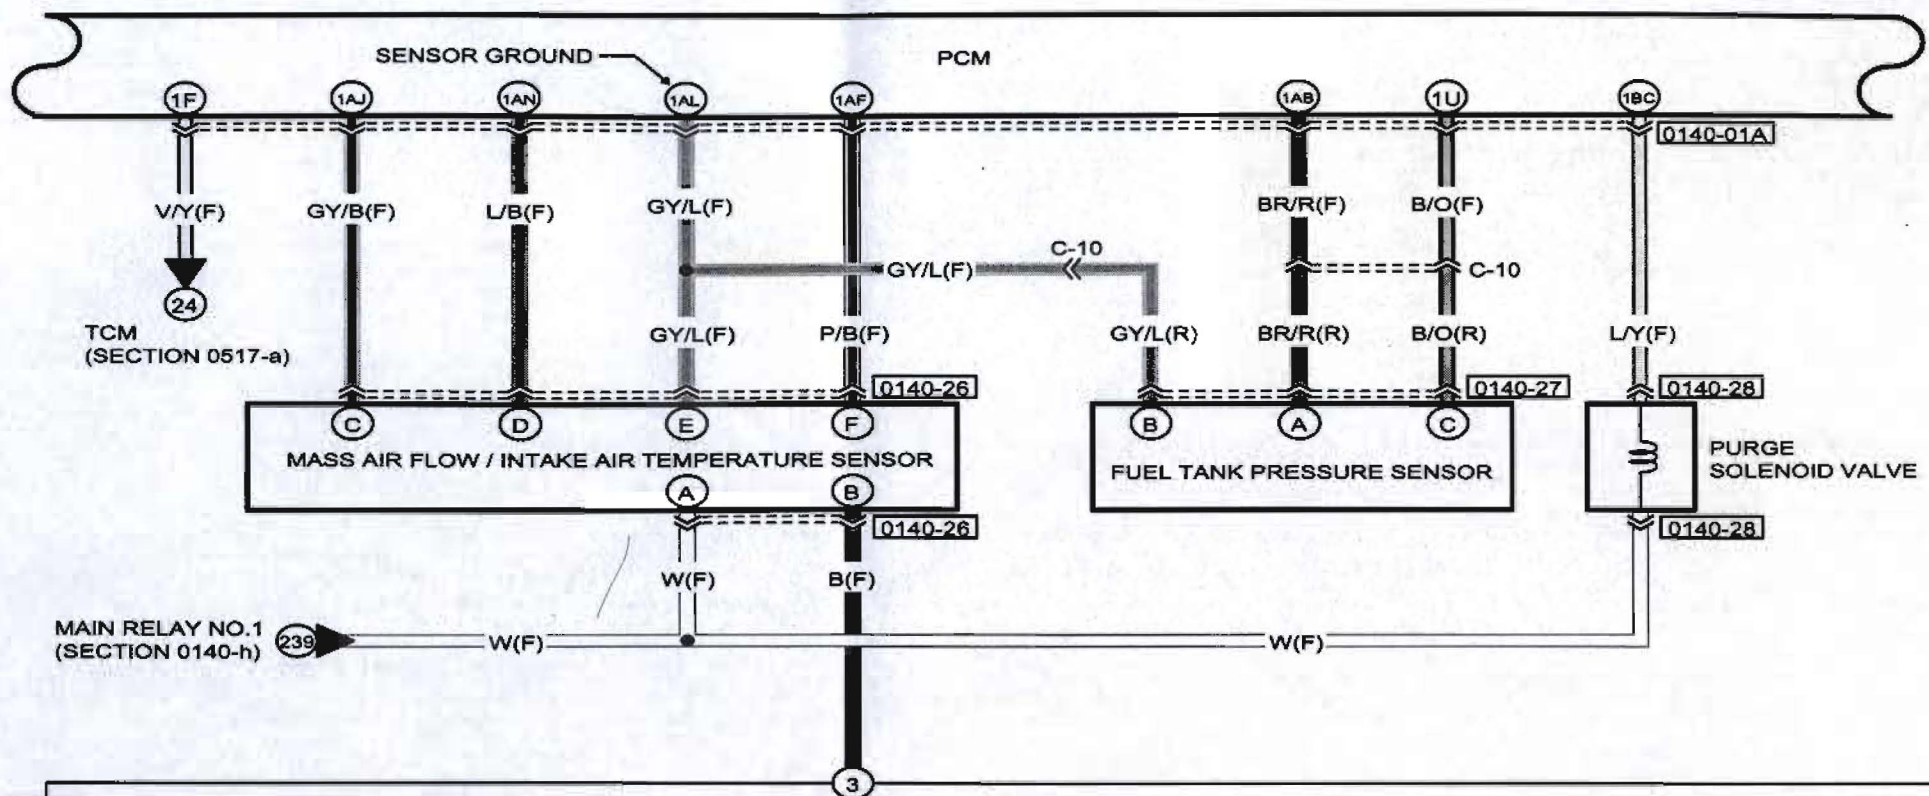 


0140-01A  
PCM

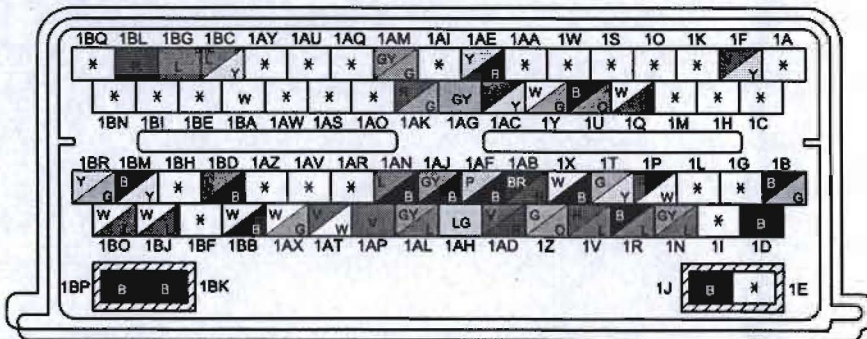 

 0140-26  
MASS AIR FLOW /  
INTAKE AIR TEMPERATURE SENSOR

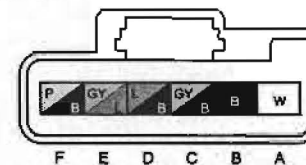


0140-27  
FUEL TANK PRESSURE  
SENSOR






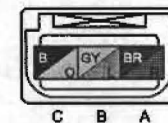 



0140-28  
PURGE SOLENOID  
VALVE



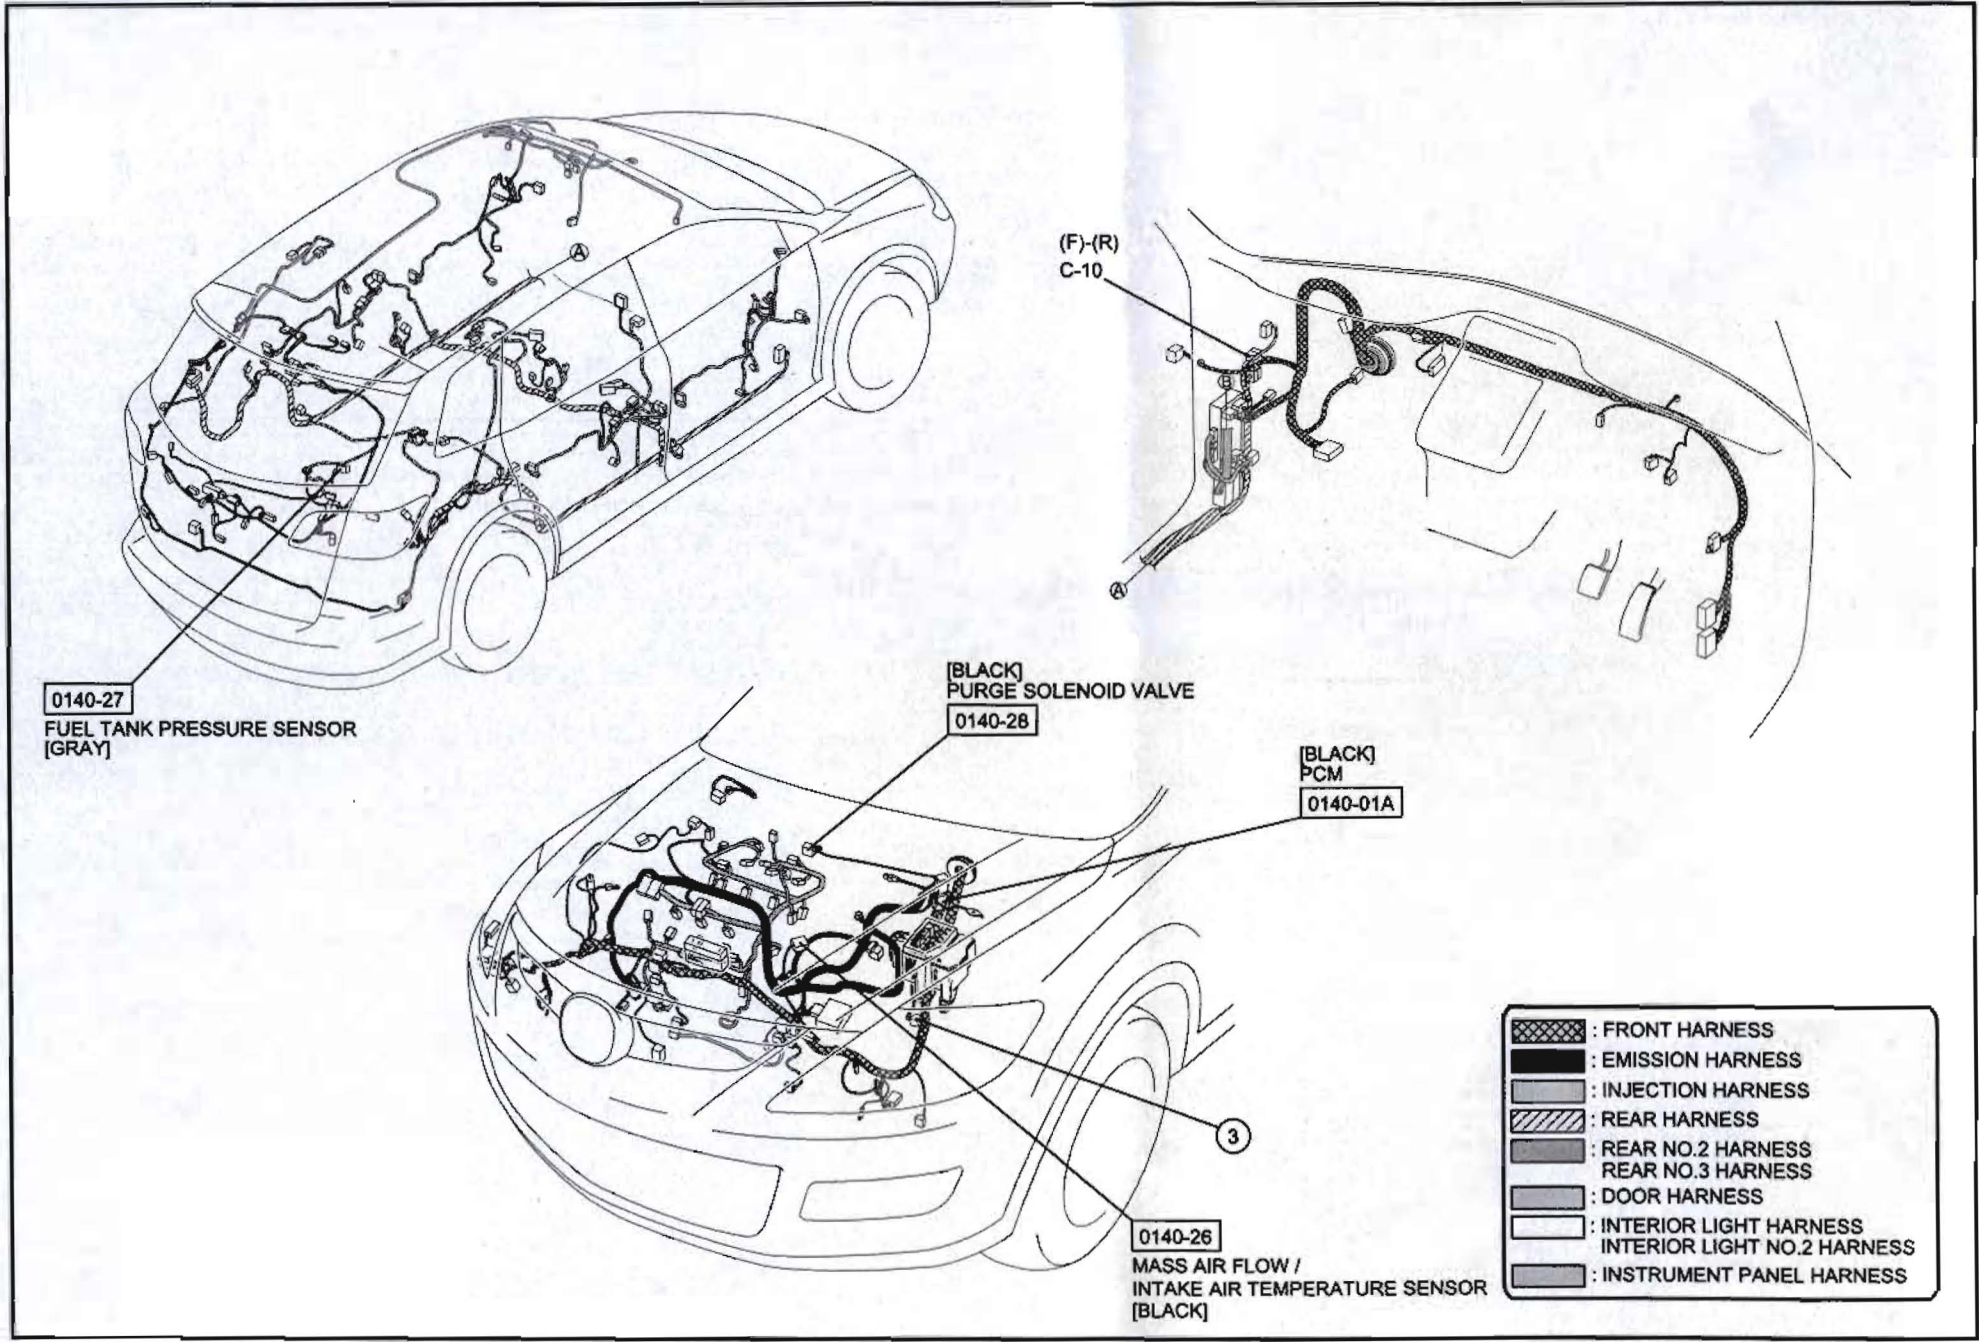 

       
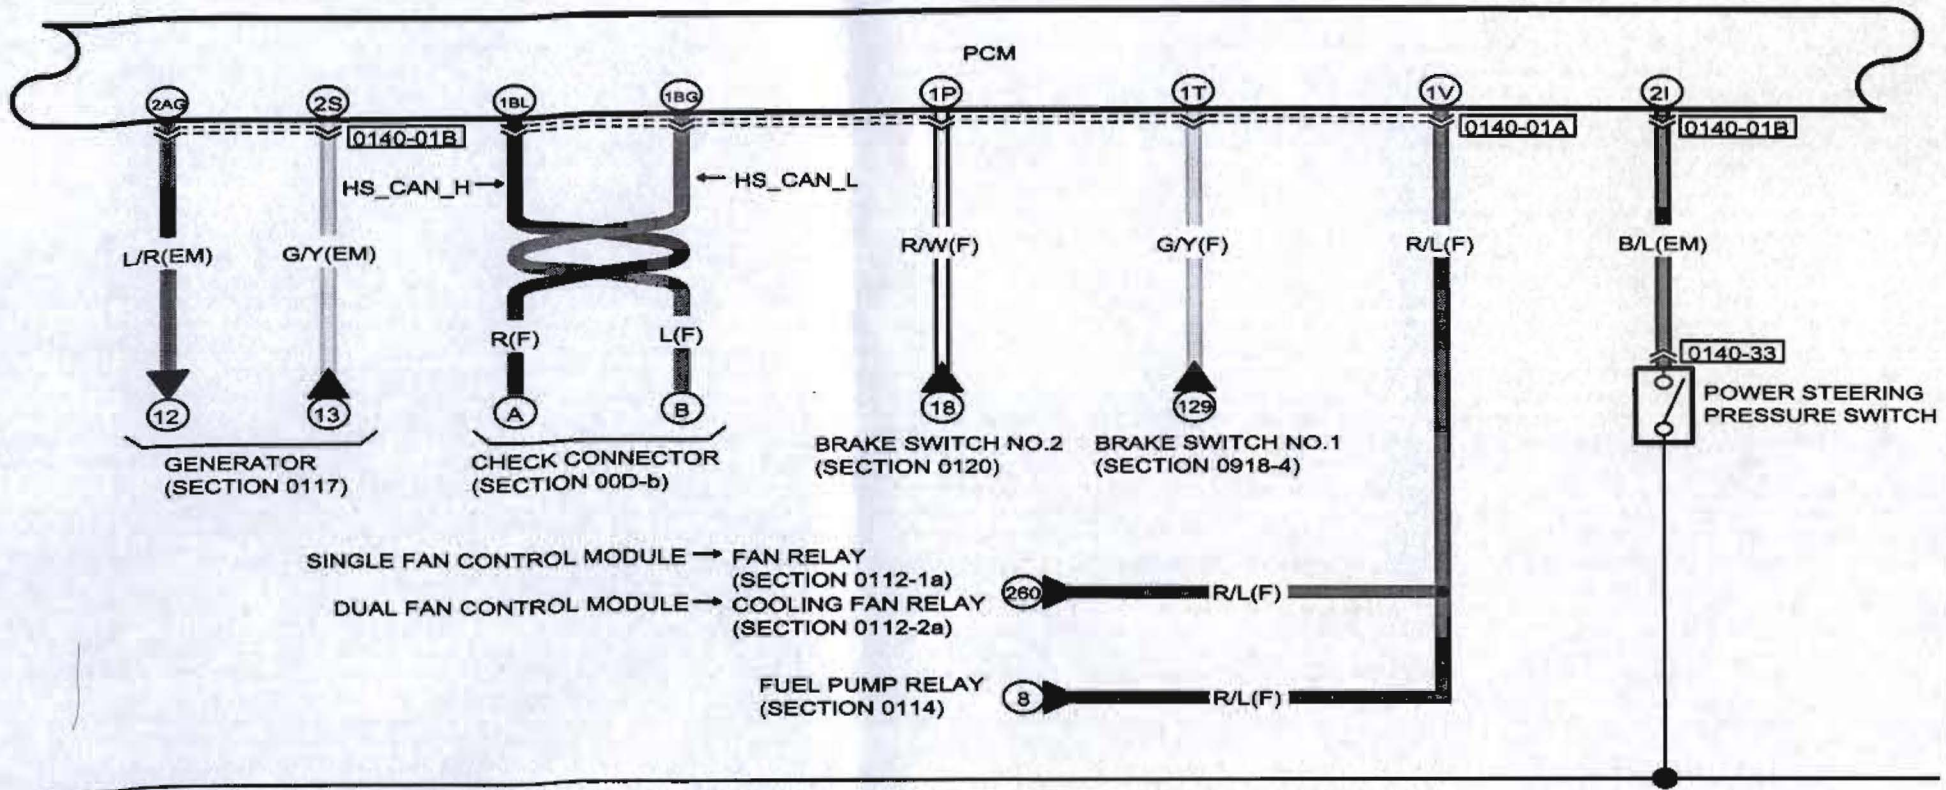 


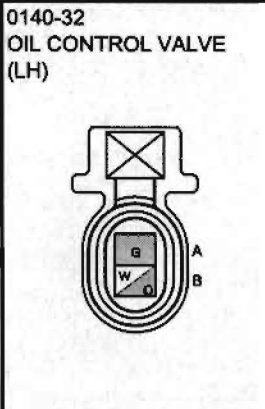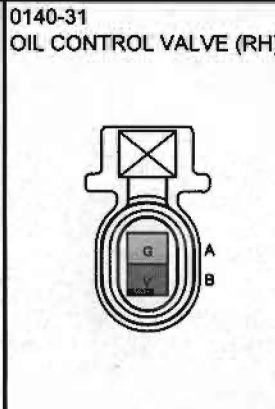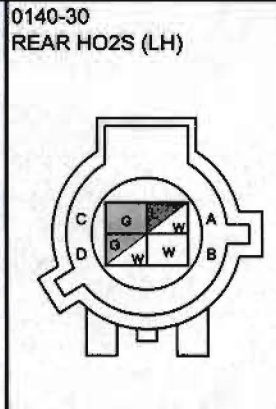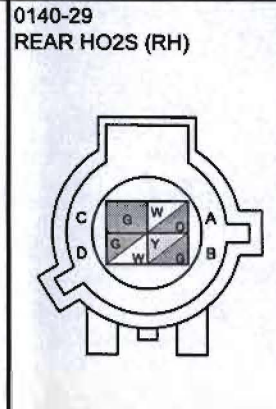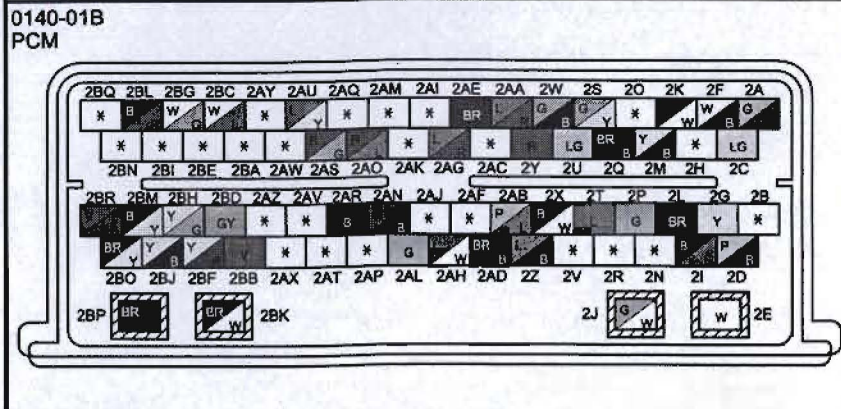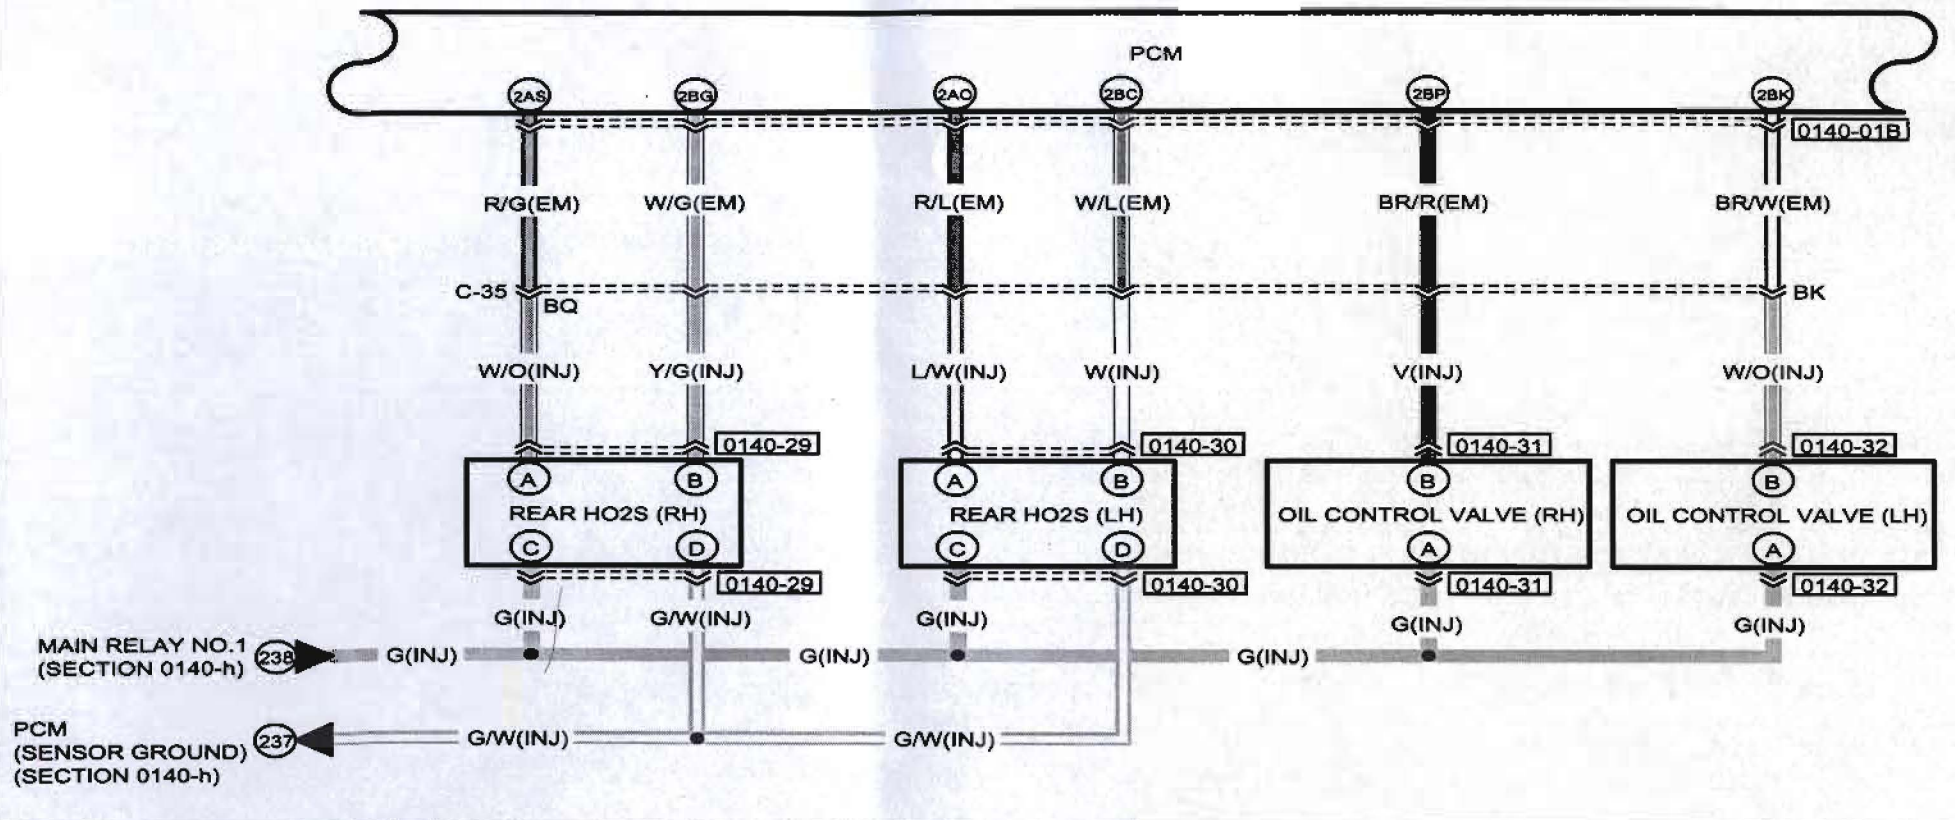

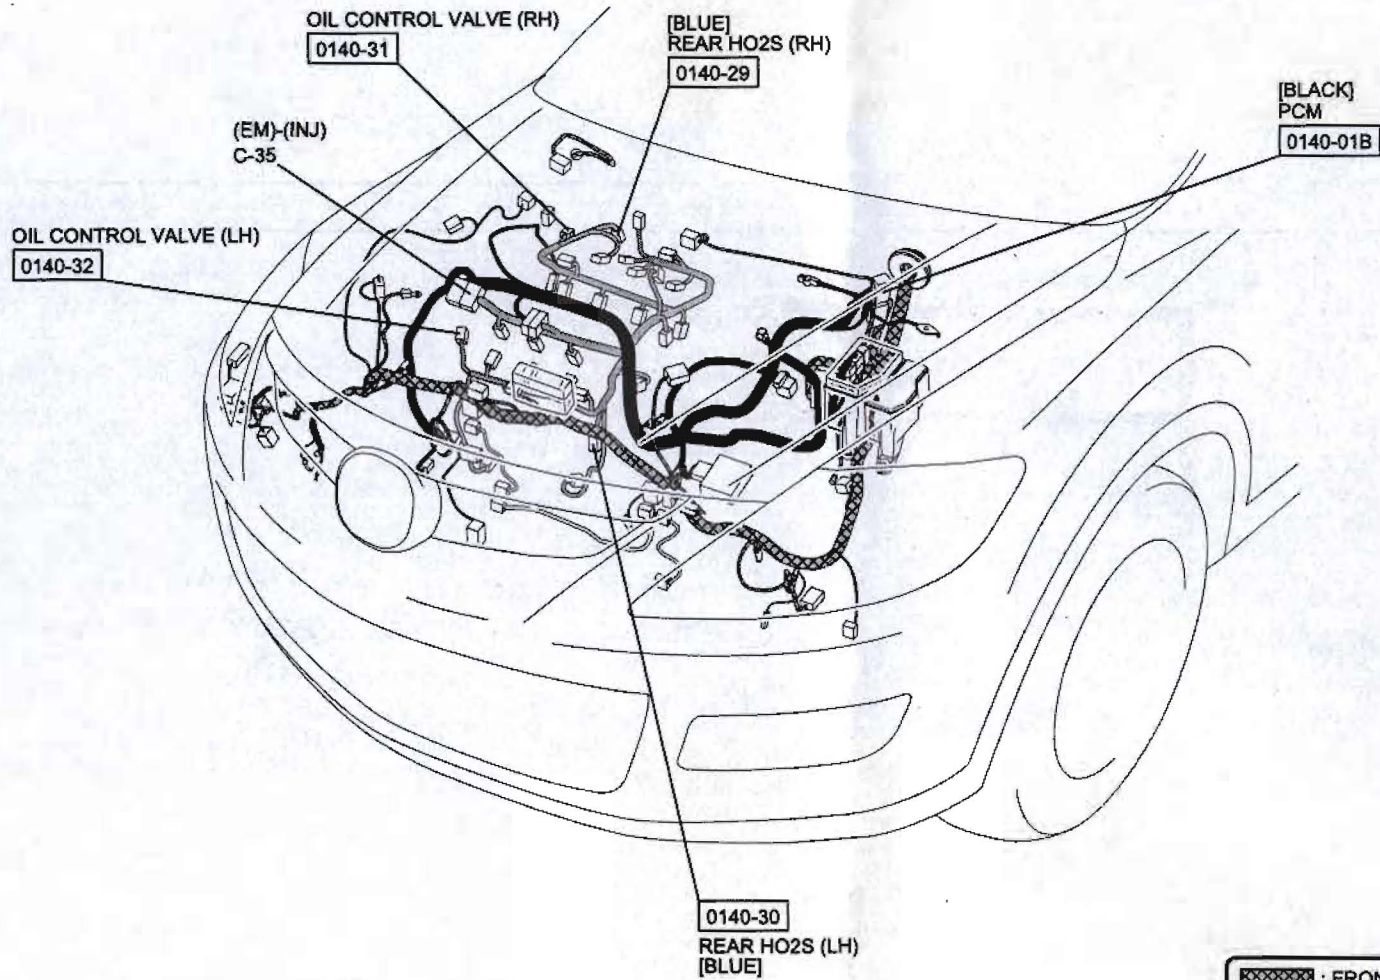




	: FRONT HARNESS
	: EMISSION HARNESS
	: INJECTION HARNESS




SINGLE FAN CONTROL MODULE → FAN RELAY (SECTION 0112-1a)  
 DUAL FAN CONTROL MODULE → COOLING FAN RELAY (SECTION 0112-2a)  
 FUEL PUMP RELAY (SECTION 0114)

 0140-01A  
PCM

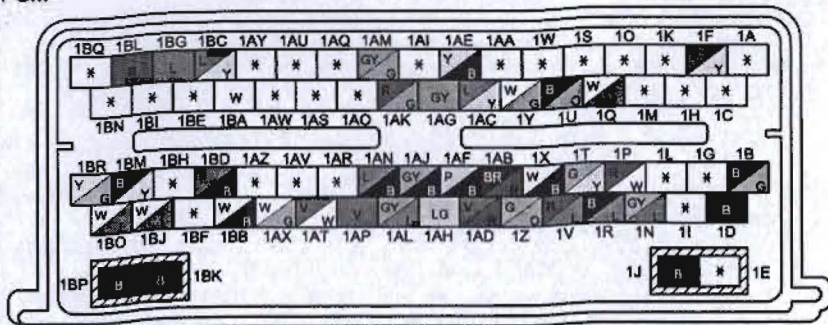

0140-01B  
PCM

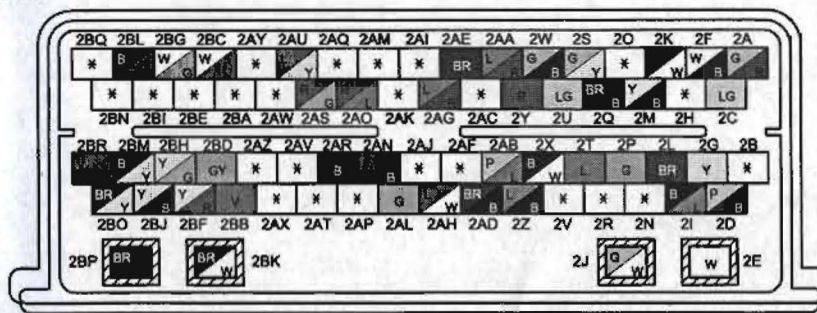 

 
0140-33  
POWER STEERING PRESSURE SWITCH


 



[BLACK]  
POWER STEERING PRESSURE SWITCH  
0140-33


[BLACK]  
PCM  
0140-01B

[BLACK]  
PCM  
0140-01A

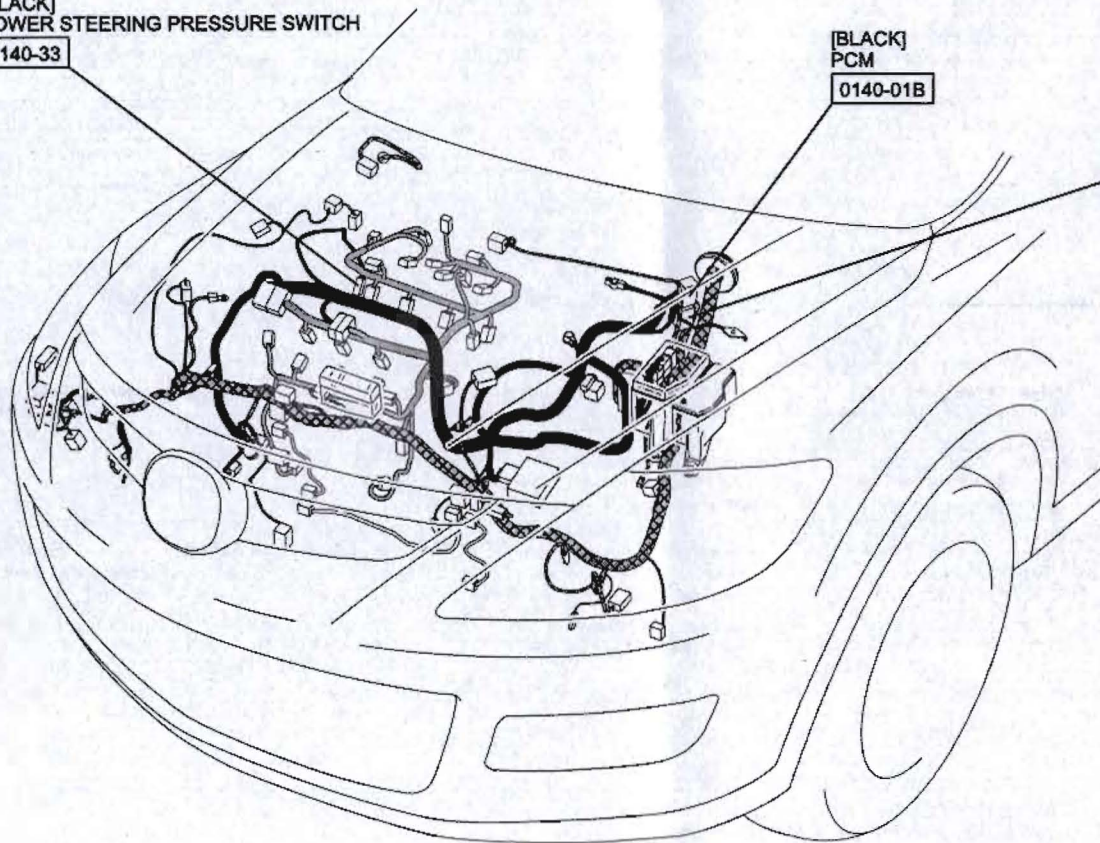


	: FRONT HARNESS
	: EMISSION HARNESS
	: INJECTION HARNESS

  85

 
 
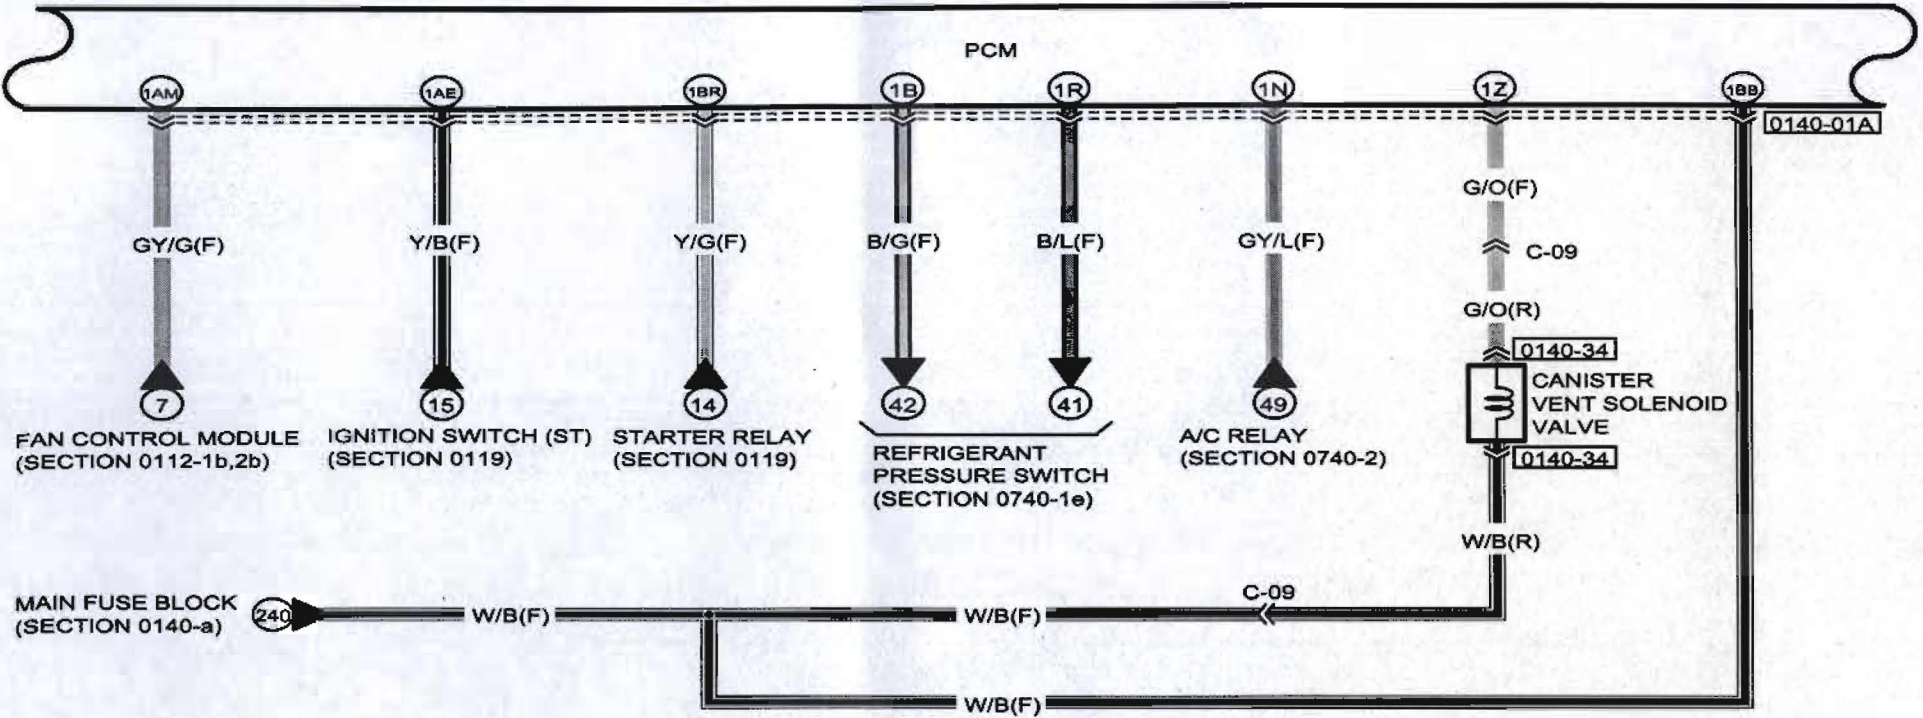 




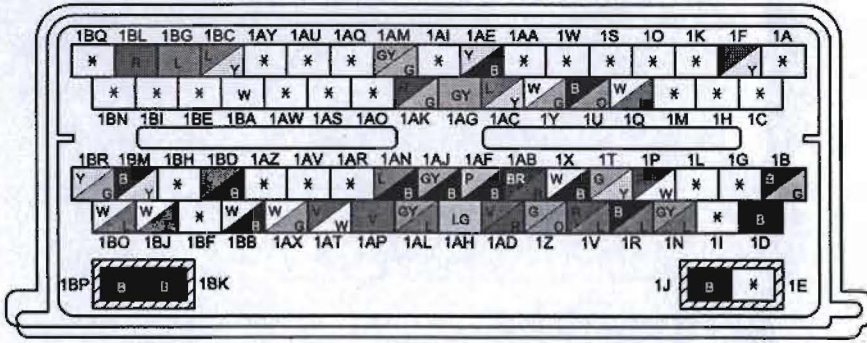


 
 

0140-01A  
PCM

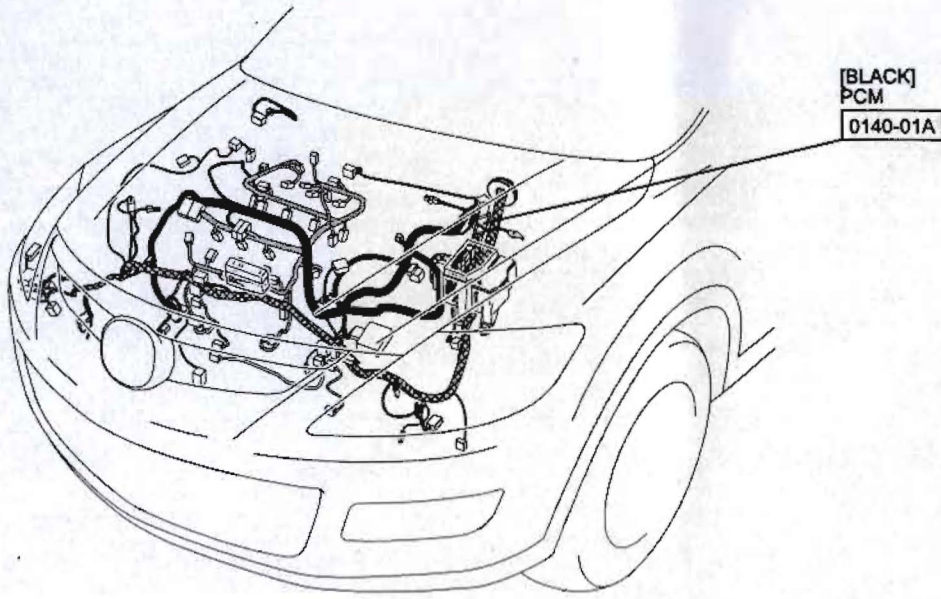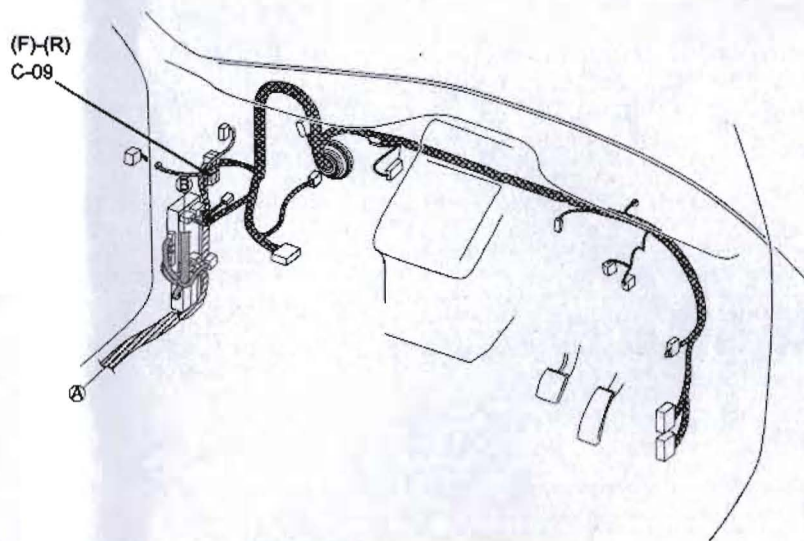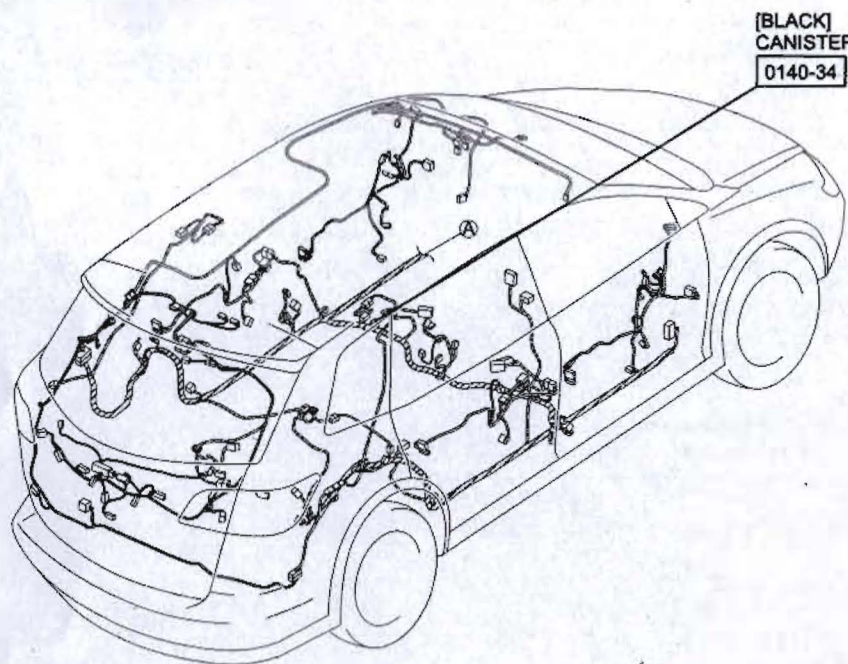


0140-34  
CANISTER VENT  
SOLENOID VALVE







	: FRONT HARNESS
	: EMISSION HARNESS
	: INJECTION HARNESS
	: REAR HARNESS
	: REAR NO.2 HARNESS REAR NO.3 HARNESS
	: DOOR HARNESS
	: INTERIOR LIGHT HARNESS INTERIOR LIGHT NO.2 HARNESS
	: INSTRUMENT PANEL HARNESS

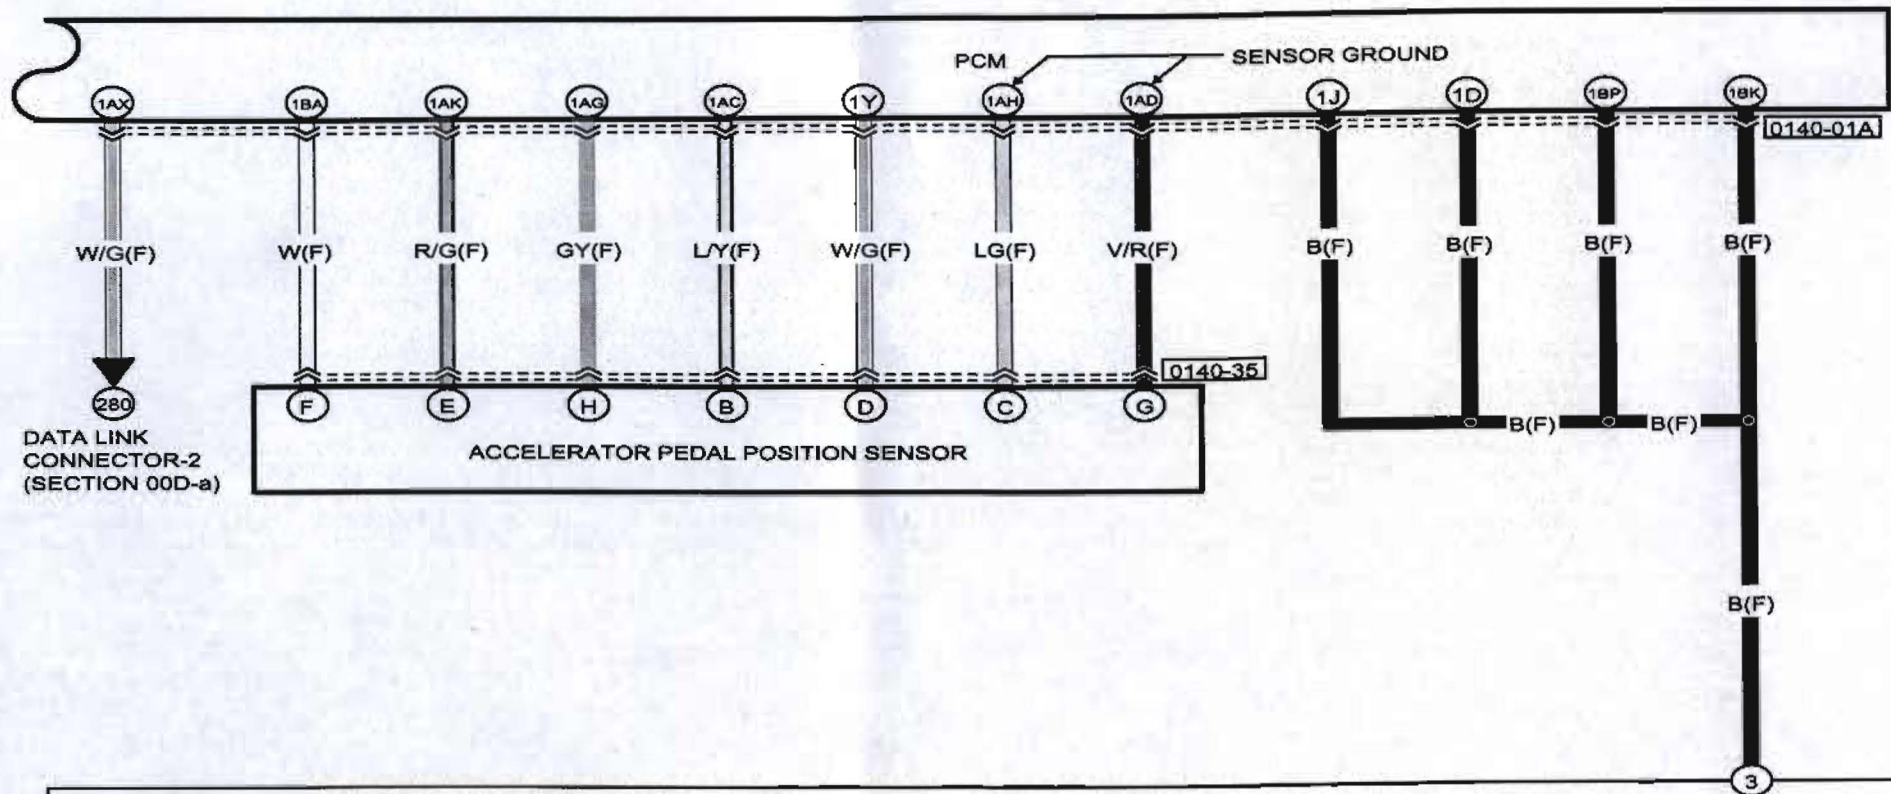 




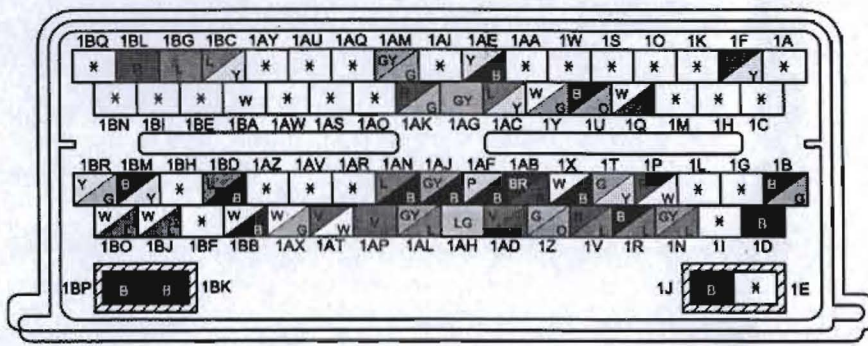 


0140-01A  
PCM

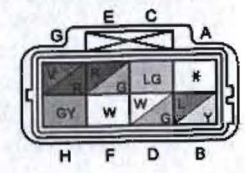 

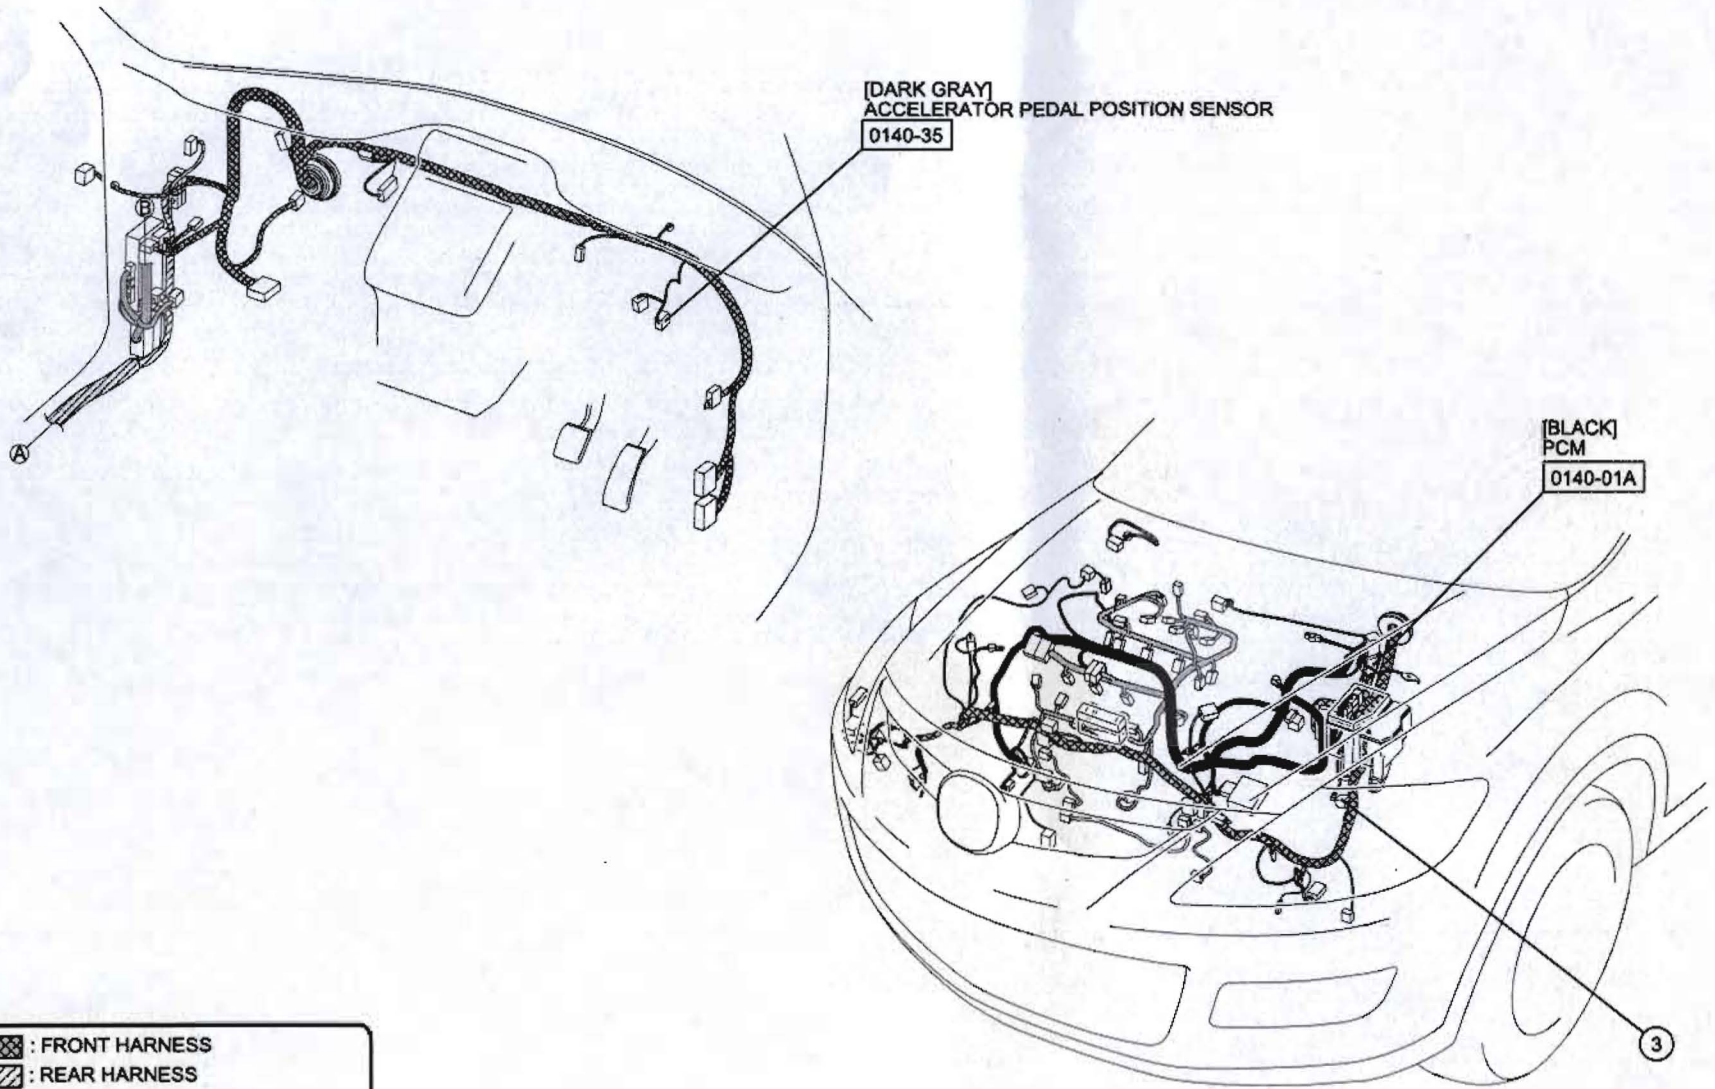 0140-35  
ACCELERATOR PEDAL POSITION SENSOR





-  : FRONT HARNESS
-  : REAR HARNESS
-  : INSTRUMENT PANEL HARNESS
-  : EMISSION HARNESS
-  : INJECTION HARNESS