

# XEDOS 6

Owner's Manual

---

mazda



# FOREWORD

---

Thank you for choosing a Xedos 6. To help ensure the enjoyable and trouble-free operation of your new Xedos 6, we urge you to read this manual carefully and follow its recommendations.

When service is necessary, remember that your Authorised Xedos Dealer knows your vehicle best and is ready to help you with all your service and maintenance needs.

We assure you of our continuing interest in your motoring pleasure and complete satisfaction.

**Mazda Motor Corporation**  
HIROSHIMA, JAPAN

## DEFINITIONS used in this Owner's Manual

“Mazda” means Mazda Motor Corporation, 3-1 Shinchu, Fuchu-cho, Hiroshima, Japan.

“Xedos Vehicle” means a Xedos Series motor vehicle manufactured by Mazda

“Authorised Xedos Dealer” means a person authorised by a Mazda Distributor to service Xedos Vehicles or perform repairs as shown on the Authorised Xedos Dealer List.

“Genuine Xedos Parts” means a spare part authorised by Mazda to be used for Xedos Vehicle.



# How to Use This Manual

---

- Keep this manual in the glove box as a permanent and convenient reference.
- Throughout this manual, you will find **WARNINGS**, **CAUTIONS**, and **NOTES**.  
The **WARNING!**s remind you to be especially careful to avoid possible personal injury.  
The **CAUTIONS** are given to prevent you from making an error that could damage the vehicle or cause personal injury.  
The **NOTES** are suggestions that will help you make full use of your vehicle.
- The specifications and descriptions in this manual are accurate at the time of printing. Because improvement is a constant goal at Mazda, we reserve the right to make changes in specifications at any time without notice and without incurring any obligation. Please note that this manual applies to all models in this series and explains all equipment, including options. You may therefore find explanations for equipment not installed on your vehicle.
- When you resell your Xedos vehicle leave this manual in the vehicle. The next owner will also need the information.
- Right-hand and left-hand references in this manual are made as if facing in the same direction as the vehicle.
- This manual mainly explains the right-hand drive models, though it is applicable to both right-hand and left-hand drive models.

# TABLE OF CONTENTS

---

---

<b>1</b>	<b>Your Vehicle at a Glance</b>	<b>1-1</b>
----------	---------------------------------	------------

This section shows the location of each control and attachment of your vehicle

---

<b>2</b>	<b>Knowing Your Xedos Vehicle</b>	<b>2-1</b>
----------	-----------------------------------	------------

This section contains information to fully acquaint the driver with the vehicle.

---

<b>3</b>	<b>Protecting Your Xedos Vehicle</b>	<b>3-1</b>
----------	--------------------------------------	------------

This section contains information necessary for the safety, care, and operating economy of the vehicle.

---

<b>4</b>	<b>Driving Your Xedos Vehicle</b>	<b>4-1</b>
----------	-----------------------------------	------------

This section explains starting and driving the vehicle and how to operate its many controls and attachments.

---

<b>5</b>	<b>In Case of Emergency</b>	<b>5-1</b>
----------	-----------------------------	------------

This section recommends ways to deal with the most common emergencies.

---

**6****Appearance Care****6-1**

This section shows how to maintain the interior and exterior of the vehicle for pleasant use and longer life.

**7****Maintenance****7-1**

This section explains easily executed user maintenance and scheduled maintenance that is best performed only by an Authorised Xedos Dealer.

**8****Customer Information****8-1**

This section contains information to help ensure the complete satisfaction of all owners of Xedos vehicles.

**9****Specifications****9-1**

This section contains essential data concerning your new Xedos vehicle.

**10****Index****10-1****1****2****3****4****5****6****7****8****9****10**





# 1

 
## Your Vehicle at a Glance

---


<b>YOUR VEHICLE AT A GLANCE</b>	<b>1-2</b>
<b>GRAPHIC SYMBOLS</b>	<b>1-8</b>

# YOUR VEHICLE AT A GLANCE

## Interior Overview

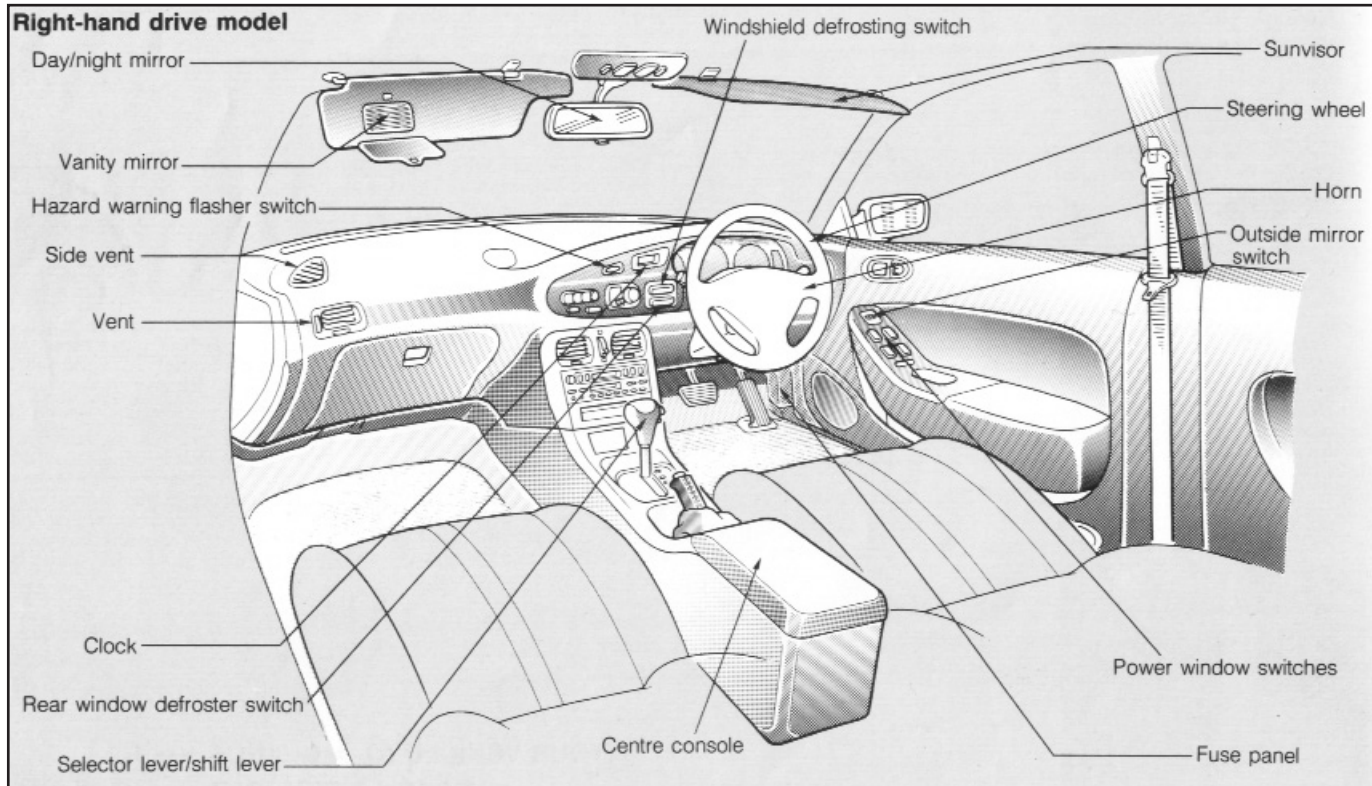


## YOUR VEHICLE AT A GLANCE

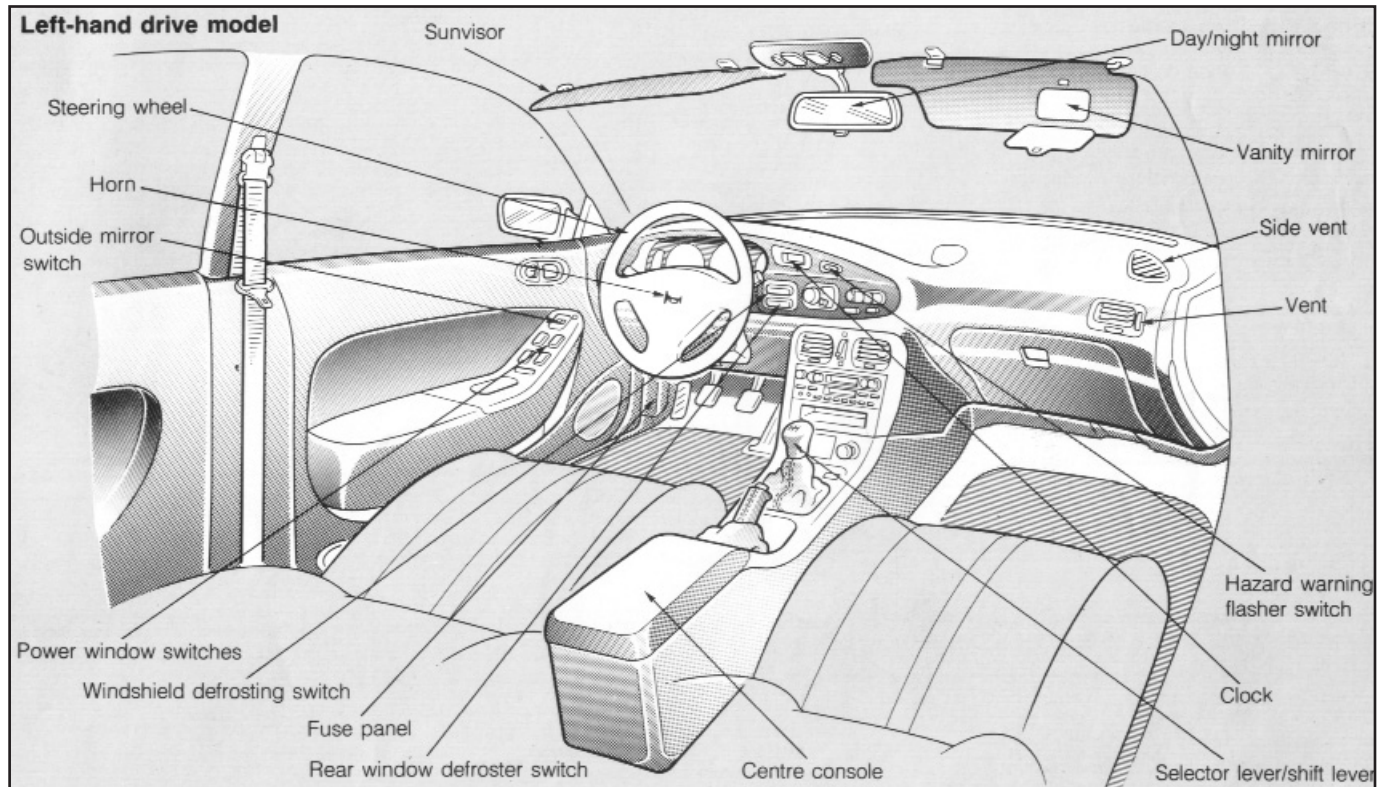 


# YOUR VEHICLE AT A GLANCE
 
## Instrument Panel Overview

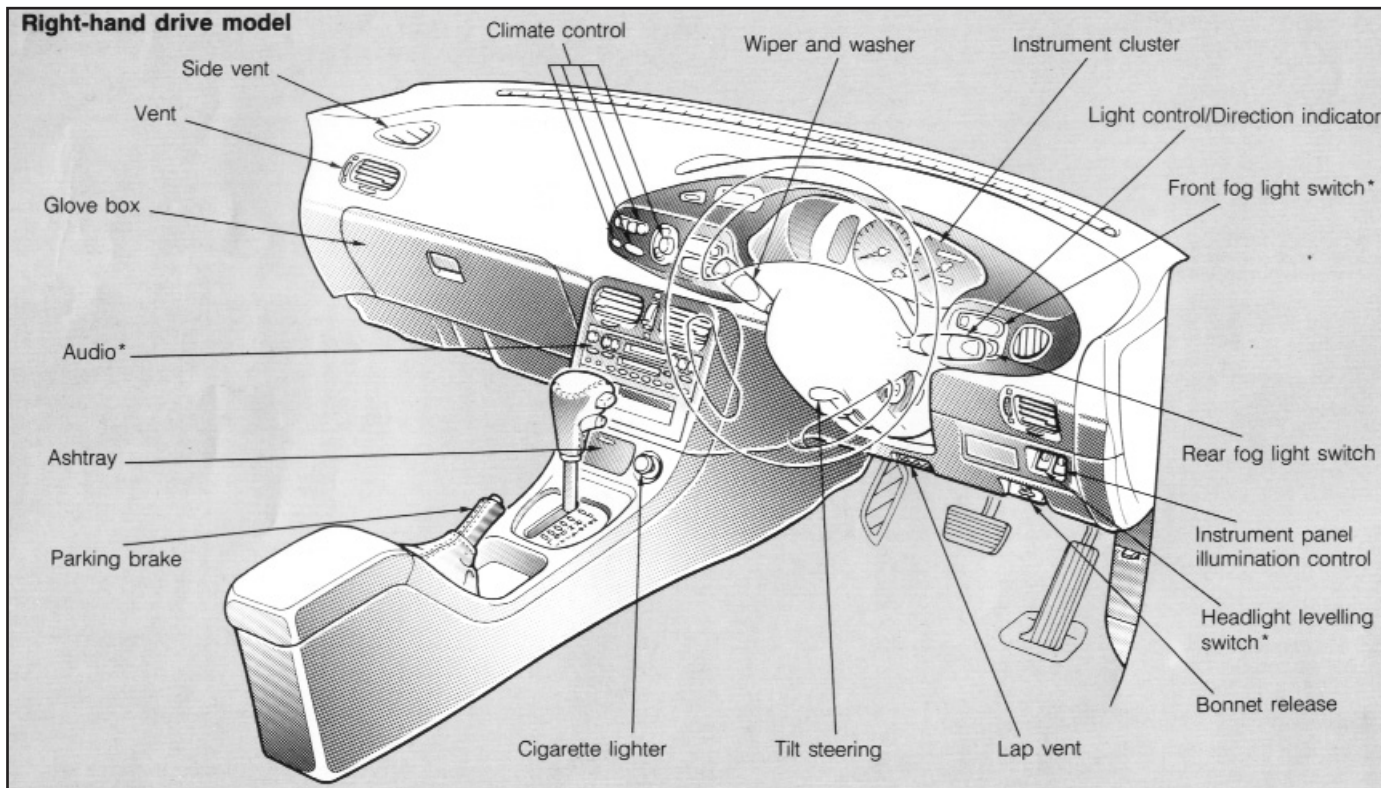


## YOUR VEHICLE AT A GLANCE

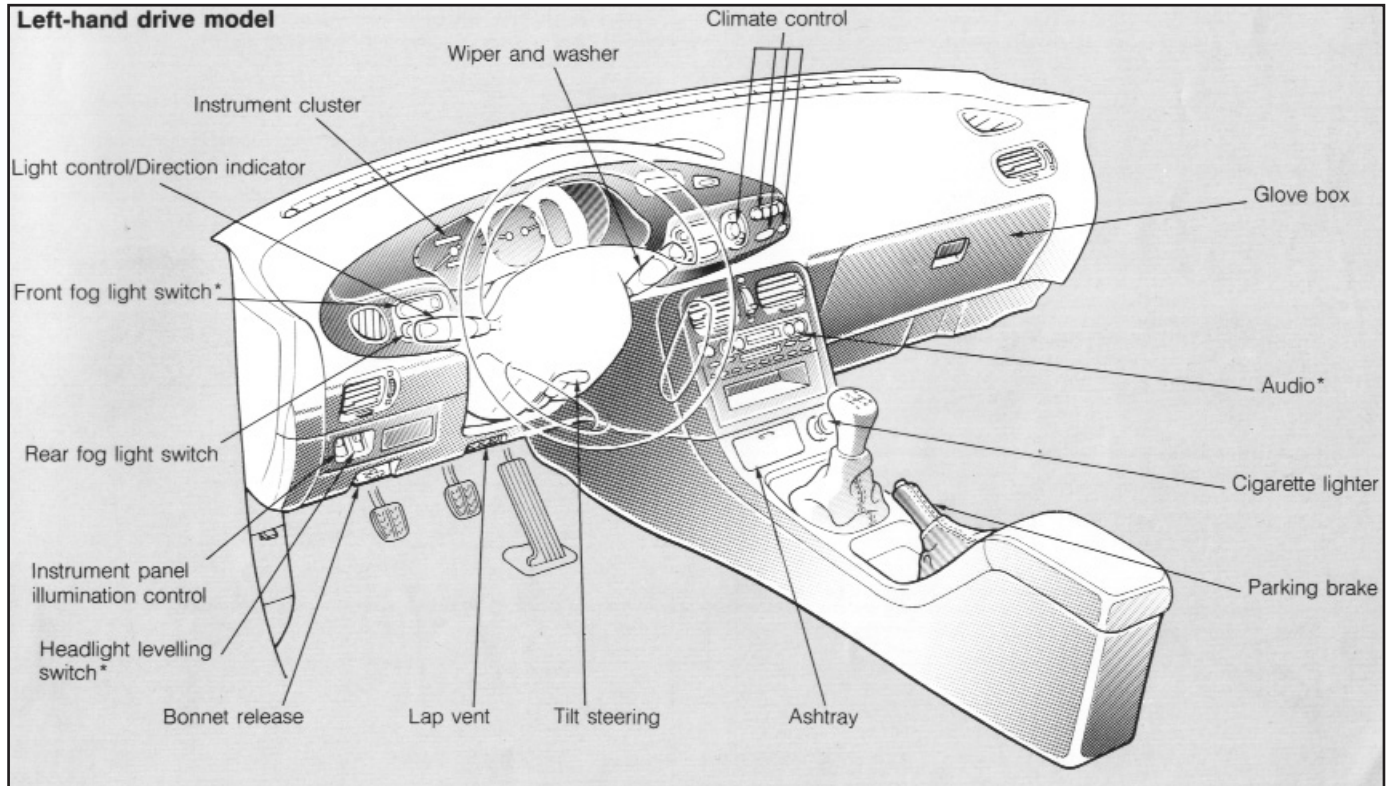 


\*Some models.

## YOUR VEHICLE AT A GLANCE


 
### Luggage Compartment

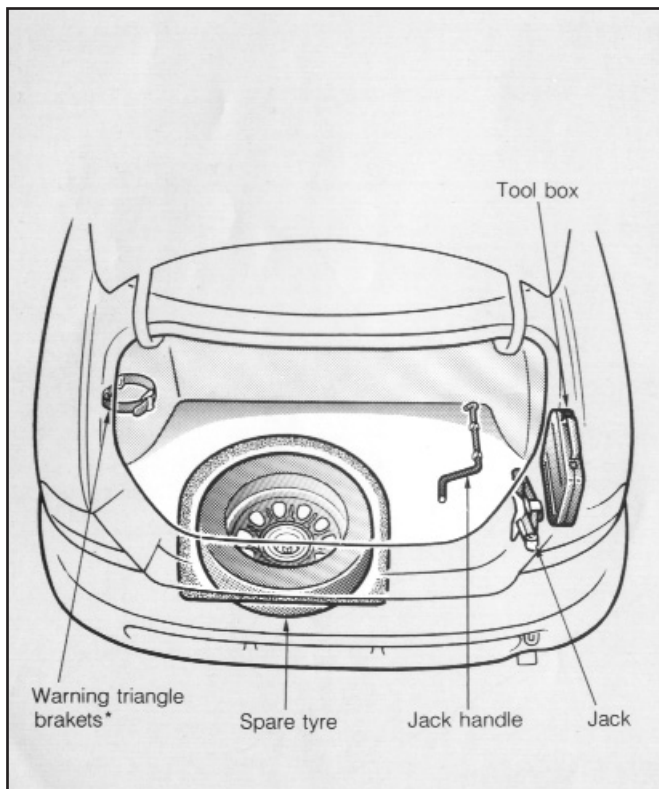

### Doors

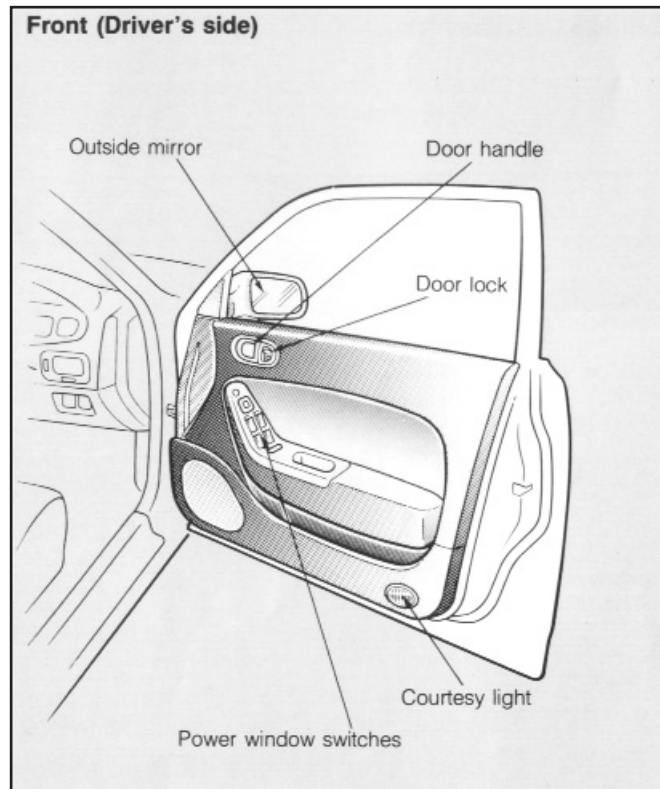 



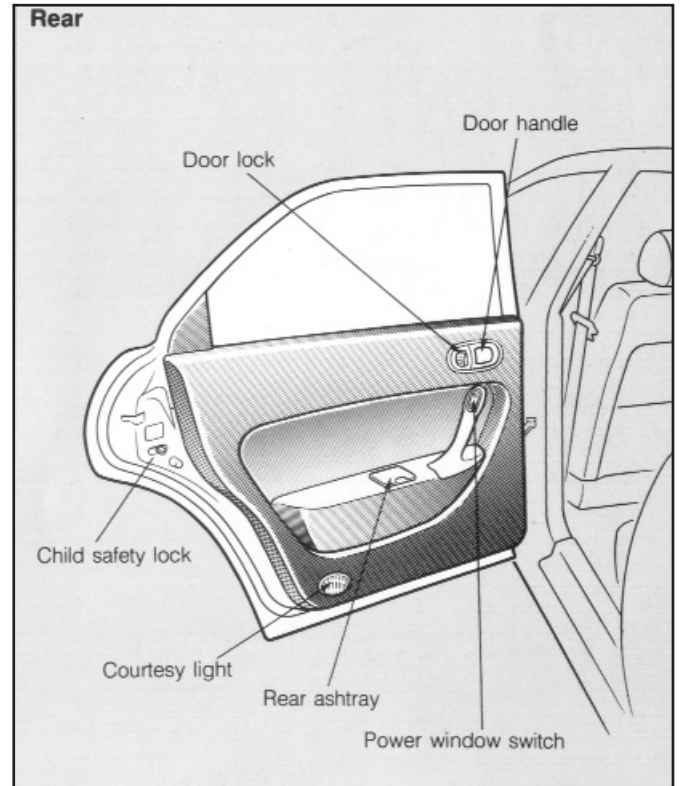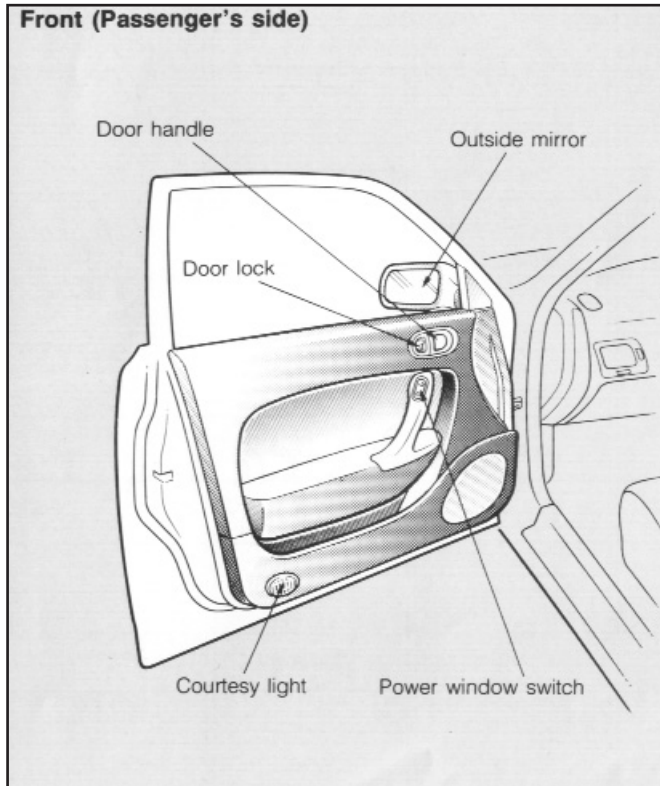  





 

 

















## YOUR VEHICLE AT A GLANCE



## YOUR VEHICLE AT A GLANCE

Some of the following symbols are used to identify controls and displays on your vehicle.

						
LIGHTS	HEADLIGHT HIGH BEAM	HEADLIGHT LOW BEAM	POSITION LIGHT	ILLUMINATION CONTROL	DIRECTION INDICATORS	HAZARD WARNING FLASHER
						
BONNET RELEASE	BOOT RELEASE	FUEL	ENGINE COOLANT TEMPERATURE	ENGINE OIL	BATTERY CHARGING SYSTEM	REAR FOG LIGHT
						
BRAKE SYSTEM	VENTILATION FAN	AIR RECIRCULATION	FRESH AIR	VENT	VENT-FLOOR	FLOOR
						
FLOOR-DEFROSTING	DEFROSTING	REAR WINDOW DEFROSTER	WINDSHIELD WIPER & WASHER	LIGHTER	HORN	WASHER FLUID



