

INDEX

	Page		Page
A			
Add-on electric equipment.....	8-2	Checking power brakes.....	7-19
Air cleaner.....	7-25	Fluid level.....	7-18
Air conditioning.....	4-35	Light.....	7-41
Air pressure, tyre.....	7-34,9-4	Pad wear indicator.....	4-12
Alternator drive belt —		Parking brake.....	4-11
1.6-litre engine.....	7-30	Power brakes.....	4-9
2.0-litre engine.....	7-31	System warning light.....	4-11, 4-16
Aluminum wheel maintenance.....	6-5	Brake and tailing malfunction warning.....	4-17
Anti-lock brake system.....	4-10	Bright-metal maintenance.....	6-4
Appearance care.....	6-1	Bulb chart, lights.....	9-5
Ashtrays.....	4-27	Bulb replacement, lights.....	7-40
Audio.....	4-41	C	
Automatic transaxle.....	4-6	Capacities.....	9-3
		Catalytic converter, operating	
		precautions.....	3-2
		Centre console.....	4-28
		Changing —	
		Coolant.....	7-15
		Engine oil and oil filter.....	7-12
		Manual transaxle oil.....	7-21
		Tyres.....	5-18
		Charging system warning light.....	4-16
		Checking —	
		Automatic transaxle fluid level.....	7-22
		Belt tensions.....	7-30
		Brake fluid level.....	7-18
		Brake pedal.....	7-18
		Clutch fluid level.....	7-18
		Coolant level.....	7-14
		Engine oil level.....	7-11
		Manual transaxle oil level.....	7-21
		Parking brake.....	7-19
		Power brakes.....	7-19
		Power steering fluid level.....	7-20
		Washer fluid level.....	7-24
		Child safety lock.....	2-6
		Cigarette lighter.....	4-27
		Climate control system.....	4-31
		Clock.....	4-26
		Clutch fluid level.....	7-18
		Coin box.....	4-29
		Cooling system, engine.....	7-14
		Courtesy light.....	2-34
		D	
		Day/Night mirror.....	2-30
		Defroster, rear window.....	4-25
		Dimensions.....	9-2
		Direction indicator lights.....	4-21,7-40
		Door-ajar warning.....	4-17
		Door locks.....	2-3
		Doors.....	1-6,2-3

E	Page
Earth, static electricity	2-7
Economical operation	3-4
Electric equipment, add-on	8-2
Electrical circuit protection	5-5
Electrical system specifications	9-3
Emergency, in case of	5-1
Emergency starting	5-3
Emission control system	3-2
Engine compartment overview	7-9
Engine cooling system	7-14
Engine exhaust gas precautions	3-2
Engine oil and oil filter, changing	7-12
Engine oil level, checking	7-11
Engine oil pressure warning light	4-17
Engine specifications	9-3
Engine temperature gauge	4-14
Exterior care	6-2

F	Page
Filter, engine oil	7-12
Finish maintenance	6-2
First aid compartment	4-30
Flashing headlights	4-20
Flat tyre	5-16
Flooded area driving	3-7

	Page
Footrest	4-30
Front-seat adjustment —	
Cushion tilt	2-17
Headrest	2-16
Seat recliner	2-16
Seat slide	2-15
Seat warmer	2-18
Front fog light	4-22
Front seat belts	2-20
Fuel-filler cap release	2-13
Fuel-filler lid	2-13
Manual override	2-14
Fuel gauge	4-14
Fuel requirements	3-2
Fuses	5-5

G	Page
Gauges —	
Engine temperature	4-14
Fuel	4-14
Speedometer	4-14
Tachometer	4-15
Glove box	4-28
Graphic symbols	1-8

H	Page
Halogen bulbs	7-37
Hazardous driving	3-5
Hazard warning flasher	5-2
Indicator	4-19
Headlights	4-19, 7-37
Headlights, Flashing	4-20
Headlight high-beam indicator	4-19
Headlight leveling	4-20
Headlight washer	4-24
Headrest	2-16
Heater	4-36
High-beam indicator, Headlights	4-19
Hold mode	4-8
Horn control	2-29

I	Page
If you have a flat tyre	5-16
Ignition switch	4-2
Ignition switch illumination	4-3
In case of emergency	5-1
Indicators lights —	
Front fog light	4-19
Hazard warning flasher	4-19
Headlight high beam	4-19
Hold indicator	4-9, 4-19

INDEX

	Page
Rear fog light.....	4-19
Instrument cluster.....	4-13
Instrument panel overview.....	1-4
Instrument panel illumination.....	4-15
Interior and floor, cleaning.....	6-5
Interior features.....	4-26
Interior general precautions.....	6-5
Interior lights.....	2-33
Interior overview.....	1-2

J

Jack.....	5-16
Jacking instructions.....	5-18
Jump-starting	5-3

K

Keyless entry system.....	2-5
Keys.....	2-2
Key reminder warning.....	4-19

L

Label information.....	3-8
Lane-change indicator.....	4-21
Lap/shoulder belt webbing cleaning.....	6-6
Lap vent.....	4-41
License plate lights.....	7-41
Lighter, cigarette.....	4-27
Lighting control.....	4-19
Lights —	
Boot.....	2-34
Courtesy.....	2-34
Interior.....	2-33
Light bulbs.....	7-37,9-5
Lights on warning.....	4-19
Map.....	2-33
Warning.....	4-16
Low fuel-level warning.....	4-19
Low washer fluid level warning.....	4-19
Lubricant specifications.....	7-43
Luggage compartment.....	1-6,2-34

M

Maintenance services.....	7-2
Manual transaxle operation.....	4-4
Map light.....	2-33

Page

Mirrors

Day/Night mirror.....	2-30
Mirror defroster.....	2-30
Outside mirror.....	2-29
Vanity mirror.....	4-29

O

Odometer.....	4-14
Oil —	
Automatic transaxle.....	7-22
Brake.....	7-18
Changing engine oil.....	7-12
Clutch.....	7-18
Engine.....	7-12
Filter.....	7-12
Manual transaxle.....	7-21
Power steering.....	7-20
Viscosity.....	7-44
Oil filter, changing.....	7-12
Operating precautions for catalytic converters.....	3-2
Outside mirror.....	2-29
Overheating	5-2

	Page		Page		Page
P		Rocking the vehicle.....	3-6	Speedometer.....	4-14
Paint damage touch-up.....	6-3	Running-in.....	3-4	Split folding rear seat.....	2-19
Parking brake.....	4-11	Running light.....	4-21	Starting the engine.....	4-3
Parking lights.....	7-40	S		Static electricity earth.....	2-7
Polishing and waxing.....	6-3	SAE viscosity numbers.....	7-44	Steering, power.....	4-12
Power brakes.....	4-9	Scheduled maintenance services.....	7-2	Steering, tilt.....	2-28
Warning light.....	4-16	Seat belts —		Steering column lock.....	4-2
Power door locks.....	2-4	Cleaning.....	6-6	Steering wheel.....	2-28
Power steering.....	4-12	Front.....	2-20	Storing tyre and jack.....	5-16
Power windows.....	2-8	Proper use and care.....	2-24	Sunroof.....	2-31
Push-starting.....	5-4	Rear.....	2-22	Sunvisors.....	4-29
R		Restraint system.....	2-20	Supplemental driver air bag	
Rear door lock, child safety lock.....	2-6	Warning light/beep.....	2-22, 4-17	restraint system.....	2-25
Rear fog light.....	4-22	Seat cushion tilt, front.....	2-17	Symbols, Graphic.....	1-8
Indicator.....	4-19	Seat recliner, front.....	2-16	T	
Rear-seat adjustment —		Seat slide, front.....	2-15	Tachometer.....	4-15
Split folding seat.....	2-19	Shift point recommendations.....	4-5	Tilt steering.....	2-28
Rear seat belt.....	2-22	Snow tyres.....	3-6	Tyres	
Rear window defroster.....	4-25	Spare tyre	5-18	Changing a tyre.....	5-18
Rearview mirrors.....	2-30	Spark plugs.....	7-32	Flat tyre.....	5-16
Recommended lubricants.....	7-43	Special driving conditions —		Inflation pressures.....	7-34, 9-4
Recommended SAE viscosity numbers.....	7-44	Flooded area.....	3-7	Snow tyres.....	3-6
Registering your vehicle		Hazardous driving.....	3-5	Spare tyre	5-18, 7-36
in a foregine country.....	8-2	Rocking the vehicle.....	3-6	Tyre care.....	7-34
Road warning	5-2	Winter driving.....	3-6	Tyre chains.....	3-7
		Specifications.....	9-1	Tyre replacement.....	5-18, 7-36

INDEX

	Page		Page
Tyre rotation	7-35	Engine oil pressure.....	4-17
Towing	5-13	Key reminder.....	4-19
Transaxle —		Lights on reminder.....	4-19
Automatic.....	4-6	Low fuel level	4-19
Manual.....	4-4	Low washer-fluid level	4-19
Trip meter.....	4-14	Parking brake	4-16
Troubleshooting guide, minor	7-45	Seat belt	4-17
		Supplemental air bag restraint system	4-18
U		Warning, road	5-2
Undercoating.....	6-4	Washer, windshield	4-24
Upholstery and interior trim cleaning.....	6-6	Waxing	6-3
		Wheels.....	7-37
		Wheel maintenance, aluminum	6-5
		Windows —	
		Glass cleaning	6-7
		Power windows	2-8
		Windshield defroster.....	4-25
		Windshield washer	4-24
		Windshield wipers	4-22
		One-touch wipers	4-23
		Winter driving	3-6
		Wiper —	
		Blades.....	7-27
		Switch	4-22
		Windshield	4-22
V			
Vanity mirror.....	4-29		
Vents	4-40		
W			
Warning lights/beeps —			
Anti-lock brake system	4-17		
Brake and taillights malfunction	4-17		
Brake system.....	4-16		
Charging system	4-16		
Door-ajar.....	4-17		