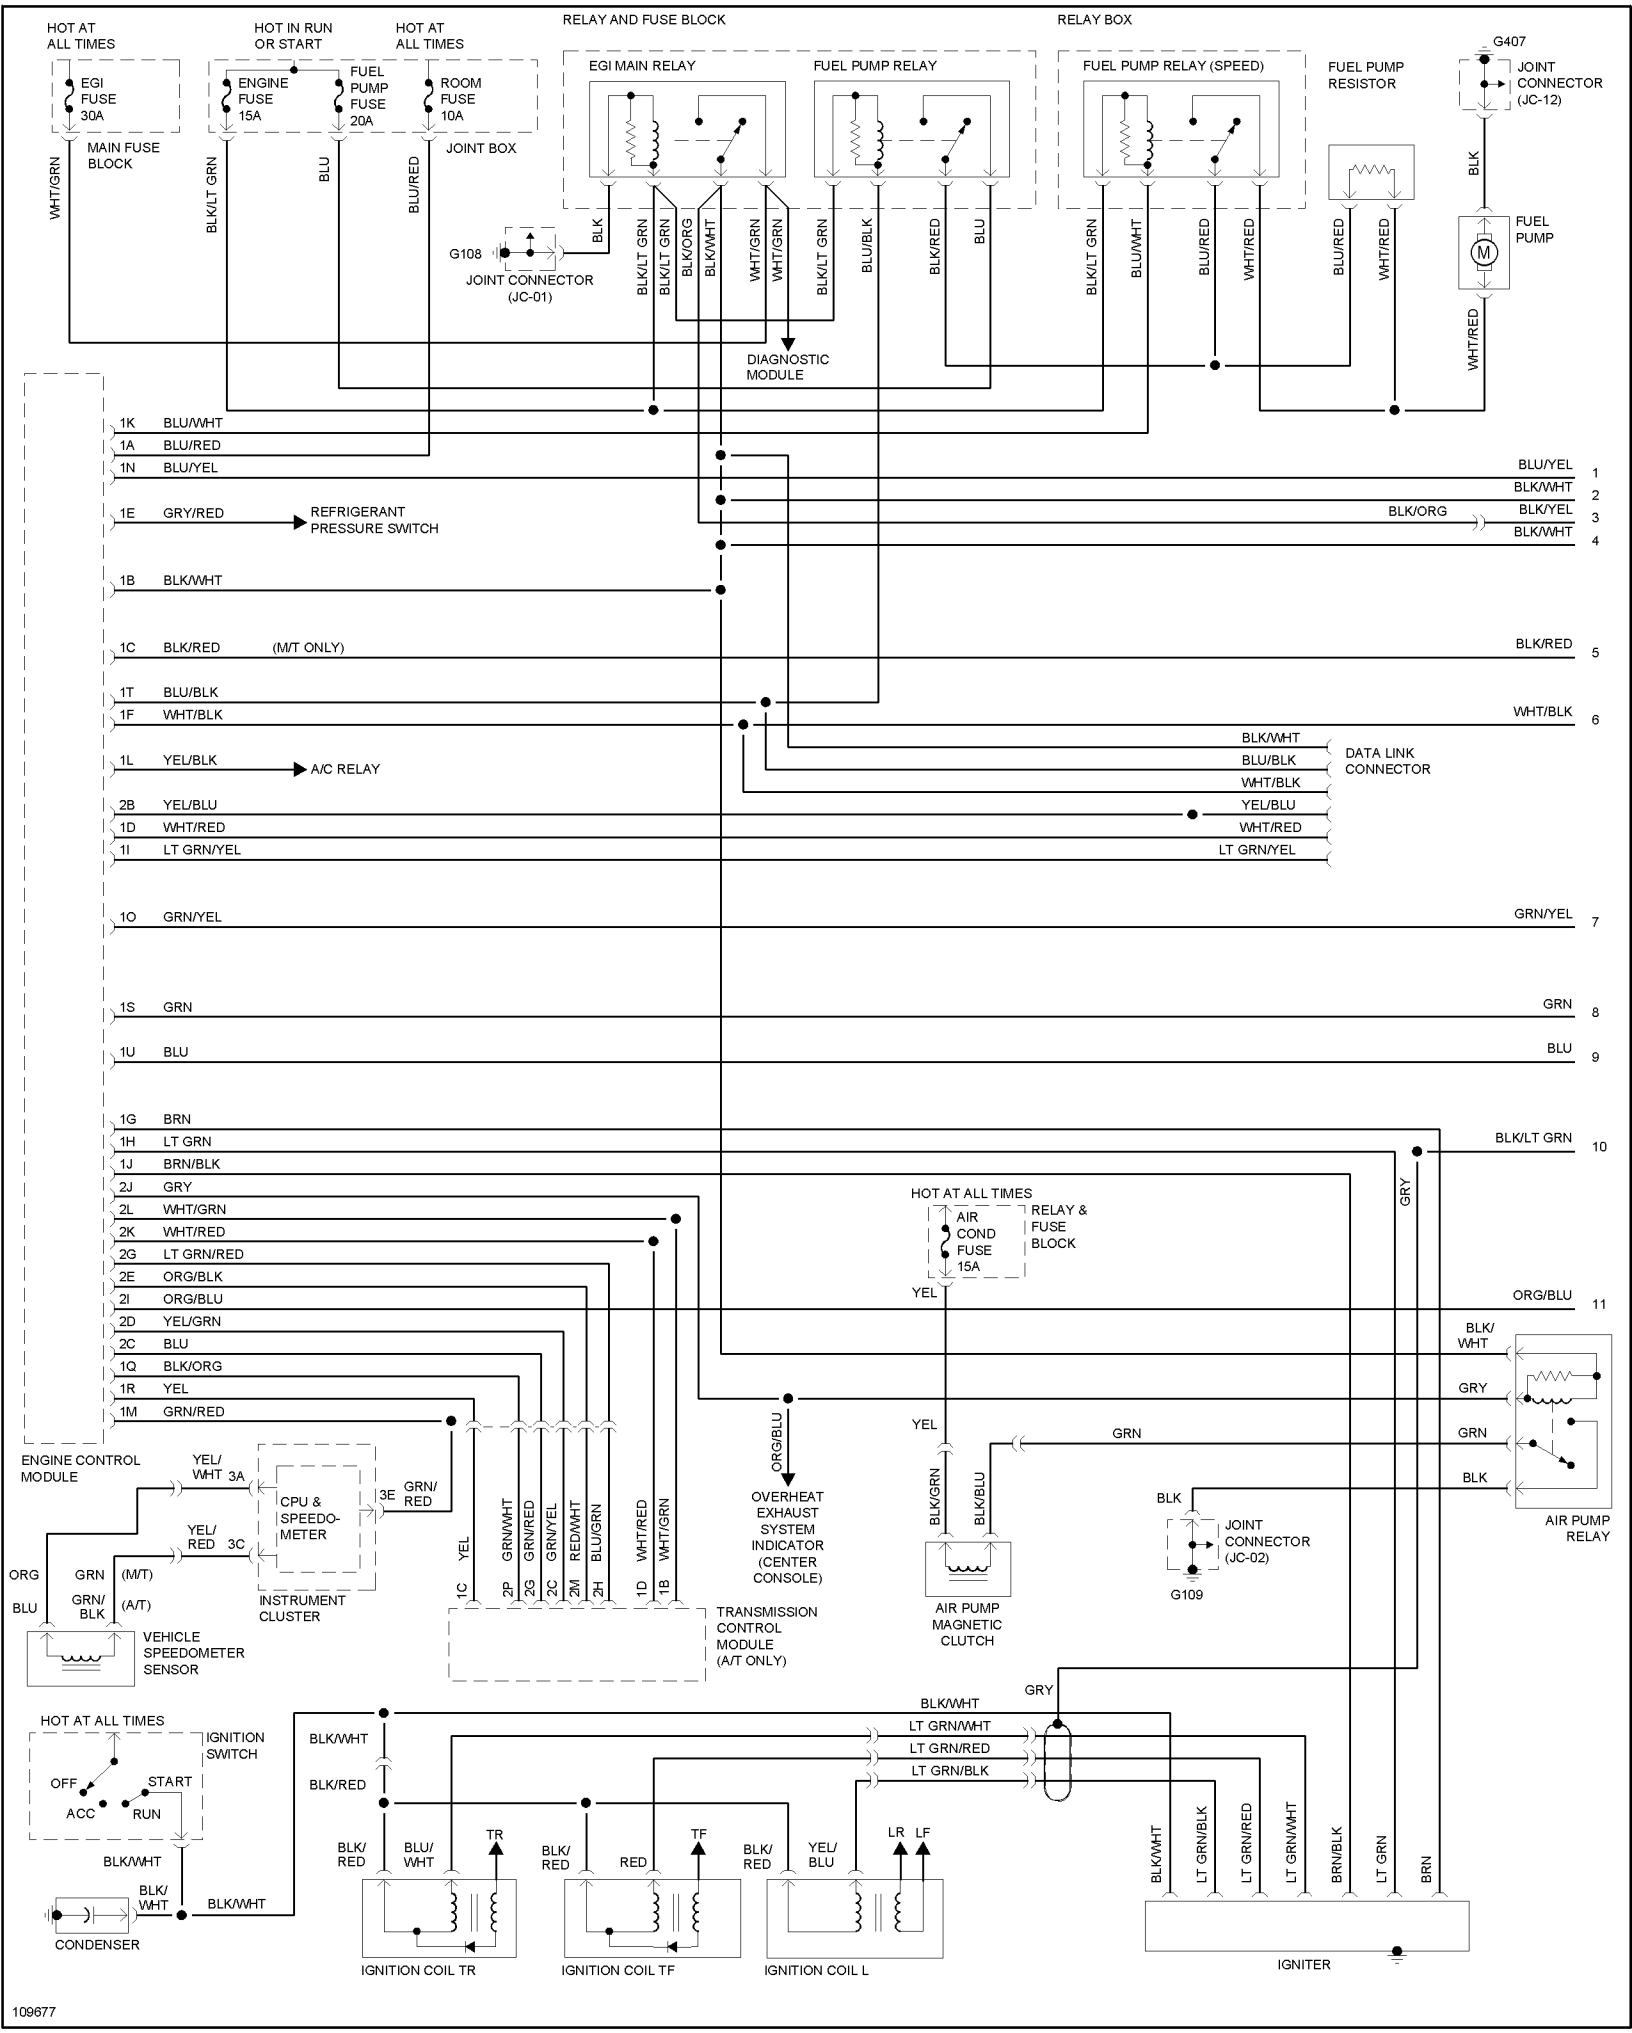
HOT AT ALL TIMES
EGI FUSE 30A
MAIN FUSE BLOCK
HOT IN RUN OR START
ENGINE FUSE 15A
FUEL PUMP FUSE 20A
HOT AT ALL TIMES
ROOM FUSE 10A
JOINT BOX
RELAY AND FUSE BLOCK
EGI MAIN RELAY
FUEL PUMP RELAY
RELAY BOX
FUEL PUMP RELAY (SPEED)
FUEL PUMP RESISTOR
G407
JOINT CONNECTOR (JC-12)
FUEL PUMP
G108
JOINT CONNECTOR (JC-01)
DIAGNOSTIC MODULE
WHT/GRN
BLK/LT GRN
BLU
BLU/RED
BLK
BLK/ORG
BLK/WHT
WHT/GRN
BLK/BLK
BLK/RED
BLU/WHT
WHT/RED
1K BLU/WHT
1A BLU/RED
1N BLU/YEL
1E GRY/RED
REFRIGERANT PRESSURE SWITCH
1B BLK/WHT
1C BLK/RED (M/T ONLY)
1T BLU/BLK
1F WHT/BLK
1L YEL/BLK
A/C RELAY
2B YEL/BLU
1D WHT/RED
1I LT GRN/YEL
DATA LINK CONNECTOR
BLK/YEL
1O GRN/YEL
1S GRN
1U BLU
1G BRN
1H LT GRN
1J BRN/BLK
2J GRY
2L WHT/GRN
2K WHT/RED
2G LT GRN/RED
2E ORG/BLK
2I ORG/BLU
2D YEL/GRN
2C BLU
1Q BLK/ORG
1R YEL
1M GRN/RED
ENGINE CONTROL MODULE
YEL/WHT 3A
YEL/RED 3C
CPU & SPEEDO-METER
3E GRN/RED
INSTRUMENT CLUSTER
ORG
GRN (M/T)
BLU
GRN/BLK (A/T)
VEHICLE SPEEDOMETER SENSOR
1C YEL
2P GRN/WHT
2G GRN/RED
2C GRN/YEL
2M RED/WHT
2H BLU/GRN
1D WHT/RED
1B WHT/GRN
TRANSMISSION CONTROL MODULE (A/T ONLY)
ORG/BLU
OVERHEAT EXHAUST SYSTEM INDICATOR (CENTER CONSOLE)
HOT AT ALL TIMES
AIR COND FUSE 15A
RELAY & FUSE BLOCK
YEL
BLK/GRN
BLK/BLU
AIR PUMP MAGNETIC CLUTCH
GRN
BLK
JOINT CONNECTOR (JC-02)
G109
BLK/WHT
GRY
AIR PUMP RELAY
HOT AT ALL TIMES
IGNITION SWITCH
OFF
START
ACC
RUN
BLK/WHT
BLK/WHT
CONDENSER
BLK/RED
BLK/WHT
LT GRN/WHT
LT GRN/RED
LT GRN/BLK
BLK/RED
BLU/WHT
TR
IGNITION COIL TR
BLK/RED
RED
TF
IGNITION COIL TF
BLK/RED
YEL/BLU
LR
LF
IGNITION COIL L
BLK/WHT
LT GRN/BLK
LT GRN/RED
LT GRN/WHT
BRN/BLK
LT GRN
BRN
IGNITER
109677